


NEOCLEAN-M / NEOCLEAN-M2 User's Manual

This product is an optical connector cleaner designed for cleaning MPO, MTP™ and MPO-16, MTP-16™ connector ferrule end face with a simple push action. Please read this user's manual carefully and follow its instructions in using this product.

 <p>Caution</p>	<ul style="list-style-type: none"> • This product is intended for cleaning MPO, MTP™ and MPO-16, MTP-16™ connector. It is not for use in cleaning lens type optical ports (transceivers, etc.) or other applications. • When storing, carefully ensure that the included attachment is in place, after closing its lid, in order to protect the cleaning cloth. • Please check the amount of remaining cleaning cloth through the check window before use. • The guide will not move if the cleaning cloth is used up. 	 <p>Prohibited</p>	<ul style="list-style-type: none"> • Do not store in direct sunlight, and avoid hot and/or humid environment as the product may become deformed • Do not disassemble this product. • Do not touch and/or pull out the cleaning cloth. The quality will deteriorate. • Do not use when you feel excessive force. • Do not use for any purpose which has not been described in this manual. Products may be damaged.
---	--	--	---

1. Parts

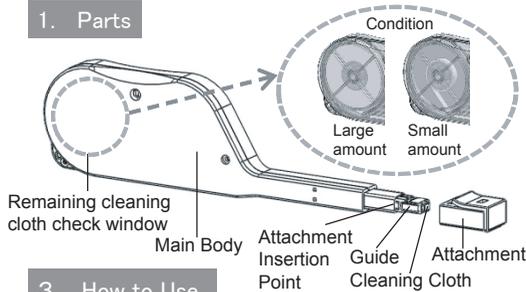

2. Specifications


Model	NEOCLEAN-M	NEOCLEAN-M2
Model	ATC-NE-M1	ATC-NE-M2
Compatible Connector	MPO, MTP™	MPO-16, MTP-16™
Compatible End Face	PC, APC Pins, No pin	PC, APC Pins, No pin
# of Usages	600 times	600 times

※ "MTP" is a registered trademark of US Conec Ltd.


3. How to Use

● Cleaning a Connector in an Adaptor


1. Remove the attachment from the guide.

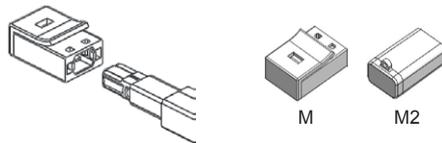

2. Align the adaptor and the guide key. Insert the guide straight into the adaptor until the cleaning cloth or the insertion mark is completely hidden.

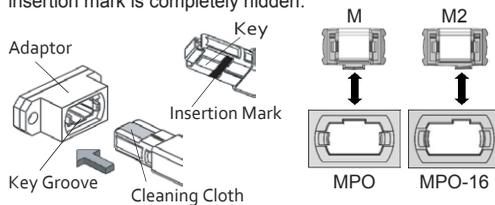


3. Push the main body straight into the Adaptor. When you hear the click sound, the cleaning is completed. Stop pushing and pull straight out.

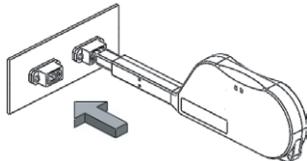


● Cleaning an Optical Connector Plug


1. Open the flap of the attachment.

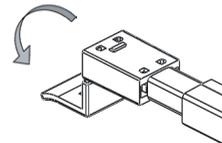

2. Align the attachment and the optical connector plug. Insert the plug straight into the attachment and push in until the key is completely hidden.

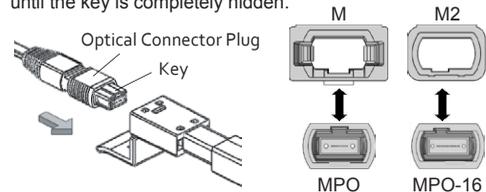

3. Insert the main body straight in to the optical connector plug. When you hear the click sound, the cleaning is completed. Stop pushing and remove straight out.

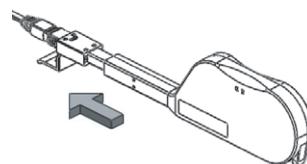

* NEOCLEAN is a trademark of NTT Advanced Technology Corporation.

● Inquiries

NTT Advanced Technology Corporation
http://www.ntt-at.com/product/optical_cleaner/



201802