Anritsu envision : ensure

RF/Microwave Signal Generators

Technical Data Sheet

MG3690C 0.1 Hz to 70 GHz/500 GHz MG3692C, MG3694C, MG3695C, MG3697C



RoHS Compliant

Introduction

The MG3690C is the "ideal microwave signal generator," offering unsurpassed frequency coverage, the lowest phase noise, leveled output power, spectral purity, switching speed, modulation performance, size, upgradeability, reliability, and service. Our signal generators are configurable for a broad range of applications from R&D to manufacturing and depot repair. Anritsu provides you a total solution including proven reliability and standard 3 year warranty plus pre-sale and post-sale support that is the best in the industry.

All specifications and characteristics apply to MG3690C signal generators Revision 2 and above under the following conditions, unless otherwise stated. The specifications in the following pages describe the warranted performance of the instrument for 25 ± 10 °C. "Typical" specifications describe expected, but not warranted performance. They do not guarantee the performance of any individual product.

Table of Contents

Definitions	 3
Signal Generator	 4
General Specifications	 4
Frequency Switching Time	
Signal Purity	
Single-Sideband Phase Noise	
Measured SSB Phase Noise	
RF Output	 11
Accuracy and Flatness	 12
Other RF Output Power Specifications	 14
Modulation	
Millimeter-wave Frequency Coverage	 19
Inputs and Outputs	
Rear Panel	
Ordering Information	 22
Options	 22

Definitions

	All specifications and characteristics apply under the following conditions, unless otherwise stated:
Warm-Up Time	After 30 minutes of warm-up time, where the instrument is left in the on state.
Temperature Range	Over the 23 °C ±5 °C temperature range.
Typical Performance	Typical specifications in parenthesis () describe performance that will be met by a minimum of 80% of all products. They do not include guard bands and are not warranted.
	Typical specifications that are not in parenthesis are not tested and not warranted. They are generally representative of the nominal characteristic performance.
Uncertainty	A coverage factor of K=2 is applied to the measurement uncertainties.
Calibration Cycle	Recommended calibration cycle is 2 years from the date of shipment (standard warranty).
	All specifications subject to change without notice. For the most current data sheet, please visit the Anritsu web site: www.anritsu.com
	Temperature Range Typical Performance Uncertainty

General Specifications

Frequency Coverage Model/Option No.	Frequency Coverage ^a	Output Connector
MG3692C	2 GHz to 20 GHz	2.92 mm K(f)
MG3694C	2 GHz to 20 GHz	
		2.92 mm K(f)
MG3695C	2 GHz to 50 GHz	1.85 mm V(f)
MG3697C	2 GHz to 67 GHz ^b	1.85 mm V(f)
Option 4	8 MHz to 2.2 GHz ^c	Model No. Dependent
Option 5	8 MHz to 2 GHz ^c	Model No. Dependent
Option 22	0.1 Hz to 10 MHz	Model No. Dependent
. Operational to 70 GHz . All specifications apply ≥ 10 MHz	neter-wave multiplier 2000-1694 series (see page 2-19).	
Options 4 and 5	Frequency extension down to 8 MHz	I for a set that a fifth a base of a large to 0 MU
	Two options are available to extend the 2 GHz low end Option 4 uses a digital down-converter (DDC) with suc noise performance of the two choices, at the expense range, analog sweep mode is not available, and pulse addition, frequency and phase modulation mod index DDC. Option 5 maintains all analog performance by u not improve phase noise performance.	cessive divide-by-two circuitry. It offers the best pha of some analog performance < 500 MHz. In that modulation performance is specified as typical. In c is scaled by the division ratio of each band of the
Option 22	If frequency coverage down to 0.1 Hz is desired, Optic	on 22 can be added with either Option 4 or 5.
	Option 22 uses Direct Digital Synthesis (DDS) for CW a analog sweep are not available in the DDS band. Freq across the complete instrument frequency range is de	uency resolution < 10 MHz is 0.02 Hz. Output power
CW Mode		
Accuracy	Same as internal or external 10 MHz time base	
Internal Time Base Stability	With aging: $< 2 \times 10^{-9}$ /day ($< 5 \times 10^{-10}$ /day with Option	16)
	With temperature: < 2 x 10^{-8} /°C over 0 °C to 55 °C (< 2	2 x 10 ⁻¹⁰ /°C with Option 16)
Resolution	0.01 Hz	
Internal Time Base Calibration	The internal time base can be calibrated via the System (10 MHz ± 50 Hz).	m Cal menu to match an external reference
External 10 MHz Reference Input	Accepts external 10 MHz ± 50 Hz (typical) 0 dBm to +20 dBm time base signal	
	Automatically disconnects the internal high-stability ti	ime-base option (if installed)
	Rear panel BNC (50 Ω impedance)	
	Selectable bandwidth for best phase noise immunity	or best phase tracking performance
10 MHz Reference Output	1 V _{p-p} into 50 Ω, AC coupled	1 31
	Rear panel BNC (50 Ω impedance)	
Phase Offset	Adjustable in 0.1 degree steps	
Electronic Frequency Control (EFC)	-4 V to +4 V input range	
	0.2 ppm/V typical sensitivity (0.08 ppm/V typical for O	ntion 3x)
	\leq 250 Hz modulation bandwidth	
	Rear panel BNC (high impedance)	
Phase-Locked Step Sweep Mode		
Sweep Width	Independently selected, 0.01 Hz to full range	
,	Every frequency step in sweep range is phase-locked.	
Accuracy	Same as internal or external 10 MHz time base	
Resolution (Minimum Step Size)	0.01 Hz	
	U.U.I FIZ	

Accuracy	Same as internal or external 10 MHz time base
Resolution (Minimum Step Size)	0.01 Hz
Linear/Log Sweep	User-selectable linear or log sweep
	In log sweep, step size logarithmically increases with frequency.
Steps	User-selectable number of steps or the step size
Number of Steps	Variable from 1 to 10,000
Step Size	0.01 Hz to the full frequency range of the instrument
	If the step size does not divide into the selected frequency range, the last step is truncated.
Dwell Time Per Step	Variable from 1 ms to 99 s
Fixed Rate Sweep	Variable from 30 ms to 99 s

 2.2.2 CH2 for stop frequencies > 20 OH2. For story of these analog sweep startstop limits are ex Analog sweep is not available < 10 MH2 with Option 2.2. Accuracy The lesses of ± 30 MH2 or ± 2 MH2 H2.25 % of sweep width for Sweep Speeds of ≤ 50 MH2/ms (for Speed Speeds of ≤ 50 MH2/ms (for Speed Speeds Of Speed Speed Speed Speed Speed Speed Speed Speed Speeds Of Speed Speed	nalog Sweep Mode (Option 6)	
accuracy The lesser of ± 30 MHz or ± 2 MHz +0.25 % of sweep width for Sweep Speeds of ≤ 50 MHz/ms (t Sweep Time Range 30 ms to 99 s Alternate Sweep Mode Sweeps Internately in step sweep between any two sweep ranges. Each sweep range may be at with a power level. Manual Sweep Mode Provides stepped, phase-locked adjustment of frequency between sweep limits. User-selectable number of steps or step size. User-selectable number of steps or step size. List Sweep Mode Under CPIB or themet control, or via the front panel, up to 4 tables with 2000 non-sequential frequency/power sets can be stored and then addressed as a phase-locked sup sweep. One ta points is stored in novvabile memory. Programmable Frequency Agility Under CPIB or Ethernet control, up to 3202 non-sequential frequency/power sets can be stored and then addressed as a phase-locked movel to water tables are stored in volatile memory. Sweep Triggering Sweep triggering is provided for Analog Frequency Sweep. Step Frequency Sweep, List Frequer and W Power Sweep. Sate prequency Sweep. Step Frequency Sweep. Step Sequency Sequency Sweep. Step Sequency Sequency Sweep. Step Sequency Sequency Sweep. Step Sequency Sequency Sweep. Step Sequency Sweep. Step Sequency Sequency Sweep. Step Sequency Sequency Sequency Sweep. Sequence the stored steps. Sweep and Secue Secue Sequence Stepsed Secue S	Sweep Width	Independently selected from 1 MHz to full frequency range For units with Option 4 (Digital Down Converter), the start frequency during analog sweep is limited to \geq 2.2 GHz for stop frequencies > 20 GHz. For stop frequencies < 20 GHz, the start frequency is limited to
Accuracy Sweep Time Range 30 ms to 99 s Alternate Sweep Mode Sweep alternately in step sweep between any two sweep ranges. Each sweep range may be a with a power level. Manual Sweep Mode Provides stepped, phase-locked adjustment of frequency between sweep limits. User-selectable number of steps or step size. List Sweep Mode Under GPIB or Ethernet control, or via the front panel, up to 4 tables with 2000 non-sequential frequency/power sets can be stored and then addressed as a phase-locked step sweep. One to points is stored in non-volatile memory. All other tables are stored in volatile memory. Programmable Frequency Agility Under GPIB or Ethernet control, up to 3202 non-sequential frequency/power sets can be stored addressed as a phase-locked step sweep. Data is stored in volatile memory. Sweep Triggering Sweep triggering is provided for Analog Frequency Sweep, Step Frequency Sweep, List Frequer and CW Power Sweep. Sweep Triggering Sweep triggering is provided for Analog Frequency Sweep, Step Frequency Sweep, List Frequer and CW Power Sweep. Stored Setups Stores front panel settings and nine additional front-panel setups in a non-volatile RAM. A syst allows saving and recalling of instrument setups. Whenever the instrument use and reced, an message id slapsyed in a window on the LO identifying the probable cause and remedy. Secure Mode Instrument self-test sing sequence through ten stored setups. AUX 1/O connector, rear panel Secure Setups Stored Setups Stored Setups Stores front pane		≥ 500 MHz. A range error will be displayed if any of these analog sweep start/stop limits are exceeded.
Sweep Time Range 20 ms to 99 s Alternate Sweep Mode Sweeps alternately in step sweep between any two sweep ranges. Each sweep range may be at with a power level. Manual Sweep Mode Provides stepped, phase-locked adjustment of frequency between sweep limits. User-selectable number of steps or step size. List Sweep Mode Under GFIB or Ethernet control, or via the front panel, up to 4 tables with 2000 non-sequential frequency/power sets can be stored and then addressed as a phase-locked step sweep. One ta points is stored in non-volatile memory. All other tables are stored in volatile memory. Programmable Frequency Agillity Under GFIB or Ethernet control, up to 3202 non-sequential frequency Sweep. Cites the store and Wester Sweep and the volatile memory. Sweep Triggering Sweep triggering is provided for Analog Frequency Sweep, Step Frequency Sweep, List Frequer and CW Power Sweep, and the store and control of an external TTL signal. AUX Triggers a sweep any be selected to be at the top or bottom of the sweep. Stores front panel settings and nine additional front-panel setups in anovabilie RAM. A syst allot sequence the cusp. Whenever the instrument was turned off. Memory Sequencing Input Accepts a TTL low-level signal to sequence through the notable reads. All a syst is displayed in a window on the LCD identifying the probable cause and remedy. Stored Setups. Stored Setups Stores front panel settings and nine additional for the sweep. Ethernational setups with any off the arror is detected, an message is displayed in a window on the LCD identif	Accuracy	The lesser of \pm 30 MHz or \pm 2 MHz +0.25 % of sweep width for Sweep Speeds of \leq 50 MHz/ms (typical)
With a power level. Manual Sweep Mode Provides stepped, phase-locked adjustment of frequency between sweep limits. User-selectable number of steps or step size. List Sweep Mode Under GPIs or Ethernet control, or via the front panel, up to 4 tables with 2000 non-sequential frequency/power sets can be stored and then addressed as a phase-locked step sweep. One ta points is stored in non-volatile memory. All other tables are stored in volatile memory. Programmable Frequency Agility Under GPIs or Ethernet control, up to 3202 non-sequential frequency/power sets can be stored addressed as a phase-locked step sweep. Data is stored in volatile memory. Sweep Triggering Sweep triggering is provided for Analog Frequency Sweep. Step Frequency Sweep, List Frequer and CW Power Sweep. Auto Triggers a sweep on the low to high transition of an external TTL signal. AUX I/O connector, rear panel Single Triggers, aborts, and resets a single sweep Rest sweep may be selected to be at the top or bottom of the sweep. General Stored Setups Stores front panel settings and nine additional front-panel setups in a non-volatile RAM. A syst allows saving and recalling of instrument sterus. Whenever the instrument is turned on, contro come on at the same functions and values existing when the instrument is turned on, contro come on at the same functions and values existing when the instrument as turned orf. Memory Sequencing Input Access a TL low-level signal to sequence through then its instrued or, contro come on at the same functions atored setups. AUX I/O connector, rear panel		
User-selectable number of steps or step size. List Sweep Mode Under GPIB or Ethernet control, or via the front panel, up to 4 tables with 2000 non-sequential frequency/power sets can be stored and then addressed as a phase-locked step sweep. One ta points is stored in non-volatile memory. All other tables are stored in volatile memory. Programmable Frequency Agility Under GPIB or Ethernet control, up to 3202 non-sequential frequency/power sets can be stored addressed as a phase-locked step sweep. Data is stored in volatile memory. Sweep Triggering Sweep Triggering Sweep automatically External Triggers as weep on the low to high transition of an external TTL signal. AUX I/O connector, rear panel Signet Triggers, aborts, and resets a single sweep Reset sweep may be selected to be at the top or bottom of the sweep. General Stored Setups Stored Setups Stored Setups Stored Setups Stored for the intervision of an external TTL signal. AUX I/O connector, rear panel Self-Test Instrument self-test is performed when Self-Test soft-key is selected. If an error is detected, an message is displayed in a window on the LOD identifying the probabile cause and remedy. Stored setups Stored setups Stored setups Stored setups and y	ternate Sweep Mode	Sweeps alternately in step sweep between any two sweep ranges. Each sweep range may be associated with a power level.
frequency/power sets can be stored and then addressed as a phase-locked step sweep. One ta points is stored in non-volatile memory. All other tables are stored in volatile memory. Programmable Frequency Agility Under GPIB or Ethernet control, up to 3202 non-sequential frequency/power sets can be stored addressed as a phase-locked step sweep. Data is stored in volatile memory. Sweep Triggering Sweep triggering is provided for Analog Frequency Sweep, Step Frequency Sweep, List Frequer and CW Power Sweep. Auto Triggers as weep automatically External Single Triggers, aborts, and resets a single sweep Reset sweep may be selected to be at the top or bottom of the sweep. General Stored Setups Stored Setups Saved in a window on the LCD identifying the probable cause and remedy. Null VIO connector, rear panel Self-Test Instrument self-test is performed when Self-Test soft-key is selected. If an error is detected, an message is displayed in avindow on the LCD identifying the probable cause and remedy. Secure Mode Disables all frequency and power level state displays. Stored setups Saved in secure mode remain secure when recalled. Mode selectable from a system menu and via GPIB or Ethernet. Parameter Entry Master/Slave Operation Master/Slave Operation Ma	anual Sweep Mode	
addressed as a phase-locked step sweep. Data is stored in volatile memory. Sweep Triggering Sweep Triggering Auto Triggers sweep automatically External General Stored Setups Stores front panel settings and nine additional front-panel setups in a non-volatile RAM. A syst allows saving and recalling of instrument setups. Whenever the instrument is turned on, contr come on at the same functions and values existing when the instrument was turned off. Auto I/O connector, rear panel Stored Setups Stores front panel settings and nine additional front-panel setups in a non-volatile RAM. A syst allows saving and recalling of instrument setups. Whenever the instrument is turned on, contr come on at the same functions and values existing when the instrument was turned off. Accepts a TL low-level signal to sequence through ten stored setups. AUX I/O connector, rear panel Self-Test Instrument self-test is performed when Self-Test soft-key is selected. If an error is detected, an message is displayed in a window on the LCD identifying the optobble cause and remedy. Secure Mode Self-Test Instrument self-test is performed when Self Test soft-key is selected. If an error is detected, an message is displayed in a window on thread setups. Stored setups saved in secure moder remain secured when recalled. Mode selectable from a system menu and via GPB or Ethernet. Instrument controlled parameters to predefined default states or values. Any pending GPIB or Sthermet I/O is aborted. Selectable from the system menu Master/Slave Operation Allows two output signals to be swept with a user-selected frequency offset. One instrument controls the other via AUX I/O connections. Requires a Master/Slave Interface Cable Set (part number ND36239). User Level Flatness Correction Allows two output signals to be swept with a user-selected frequency offset. One instrument or calculated data. When user-selected frequency subsity, where deprover to delivered at the point where calibration was performed. Supported power treatables are Annitsu ML2437A, M	st Sweep Mode	frequency/power sets can be stored and then addressed as a phase-locked step sweep. One table of 200
and CW Power Sweep. Auto Triggers as weep on the low to high transition of an external TTL signal. AUX 1/O connector, rear panel Single Stored Setups Stored Setups Setup Aux 1/O connector, rear panel Self-Test Instrument self-test is performed when Self-Test soft-key is selected. If an error is detected, an message is displayed in a window on the LCD identity the probable cause and remedy. Disables all frequency and power level state displays. Stored setups saved in secure mode remain secured when recalled. Mode selectable from a system menu and via GPIB or Ethernet. Parameter Entry Instrument-controlled parameters can be entered in multiple ways: keypad, rotary data knob, i pads of the cursor-control key. Controlled parameters are frequency, power level, sweep time, and number of steps. keypad entries are terminated by pressing the appropriate soft key. Edit terminated by exiting the edit menu. Reset Returns all instrument parameters to predefined default states or values. Any pending GPIB or Ethernet I/D is aborted. Selectable from the system menu Master/Slave Operation Allows two output signals to be swept with a user-selected frequency offset. One instrument controls the other via AUX I/O connections. Requires a Master/Slave Interface Cable Set (part number ND36329). User Level Flatness Correction Allows two output signals to be swept with a user-selected frequency stability with aging Instrument of allows two to calibrate out paral hoss due to exte	ogrammable Frequency Agility	Under GPIB or Ethernet control, up to 3202 non-sequential frequency/power sets can be stored and the addressed as a phase-locked step sweep. Data is stored in volatile memory.
External Triggers a sweep on the low to high transition of an external TTL signal. AUX 1/O connector, rear panel Single Triggers, aborts, and resets a single sweep Reset sweep may be selected to be at the top or bottom of the sweep. General Stored Setups Stores front panel settings and nine additional front-panel setups in a non-volatile RAM. A syst allows saving and recalling of instrument setups. Whenever the instrument is turned on, contr come on at the same functions and values existing when the instrument was turned off. Memory Sequencing Input Accepts a TTL low-level signal to sequence through ten stored setups. AUX 1/O connector, rear panel Self-Test Instrument self-test is performed when Self-Test soft-key is selected. If an error is detected, an message is displayed in a window on the LCD identifying the probable cause and remedy. Secure Mode Disables all frequency and power level state displays. Stored setups saved in secure mode remain secured when recalled. Mode selectable from a system menu and via GPIB or Ethernet. Parameter Entry Instrument-controlled parameters can be entered in multiple ways: keypad, rotary data knob, pads of the cursor-control key. Controlled parameters are frequency, power level, sweep time, and number of steps. Keypad entries are terminated by pressing the appropriate soft key. Edit terminated by exiting the edit menu. Rest Returns all instrument parameters to predefined default states or values. Any pending GPIB or Ethernet I/O is aborted. Selectable from the system menu Master/Slave Operation Allows two output signals to be swept with a user-selected frequency offset. One instrument controls the other via AUX I/O connections. Requires a Master/Slave Interface Cable Set (part number ND36329). User Level Flatness Correction Allows tory output signals to be swept with a user-selected frequency offset. One instrument sole shows performed. Supported power meters are Anritsu ML2437A, ML2480A/B, ML2480A/B, ML2480A/B, HL2490A, and ML4803/ HP 4378, 438A, and 70100A. Five user tab		•
Reset sweep may be selected to be at the top or bottom of the sweep. General Stored Setups Stored Setups Stores front panel settings and nine additional front-panel setups in a non-volatile RAM. A syst allows saving and recalling of instrument setups. Whenever the instrument was turned off. Memory Sequencing Input Accepts a TTL low-level signal to sequence through ten stored setups. AUX I/O connector, rear panel Instrument self-test is performed when Self-Test soft-key is selected. If an error is detected, an message is displayed in a window on the LCD identifying the probable cause and remedy. Disables all frequency and power level state displays. Secure Mode Disables all frequency and power level State displays. Stored setups saved in secure mode remain secured when recalled. Mode selectable from a system menu and via GPIB or Ethernet. Parameter Entry Instrument control key. Controlled parameters are frequency, power level, sweep time, and number of steps. Keypad entries are terminated by pressing the appropriate soft key. Edit terminated by exiting the edit menu. Selectable from the system menu Master/Slave Operation Allows two output signals to be swept with a user-selected frequency offset. One instrument controls the other via AUX I/O and SERIAL I/O connections. Requires a Master/Slave Interface Cable Set (part number ND36329). User Level Flatness Correction Allows user to calibrate out path loss due to external switching and cables via entered power le GFIB power meters are anritis ML2437A, ML2438A, ML2480A/B, ML2490A, and ML4803A HP 437B, 438A, and 70100A. Five user tables are avai		Triggers a sweep on the low to high transition of an external TTL signal.
Stored Setups Stores front panel settings and nine additional front-panel setups in a non-volatile RAM. A syst allows saving and recalling of instrument setups. Whenever the instrument is turned on, contricome on at the same functions and values existing when the instrument was turned off. Memory Sequencing Input Accepts a TTL low-level signal to sequence through ten stored setups. AUX I/O connector, rear panel Self-Test Instrument self-test is performed when Self-Test soft-key is selected. If an error is detected, an message is displayed in a window on the LCD identifying the probable cause and remedy. Secure Mode Disables all frequency and power level state displays. Stored setups saved in secure mode remain secured when recalled. Mode selectable from a system menu and via GPIB or Ethernet. Parameter Entry Instrument-controlled parameters can be entered in multiple ways: keypad, rotary data knob, pads of the cursor-control key. Controlled parameters are frequency, power level, sweep time, and number of steps. Keypad entries are terminated by pressing the appropriate soft key. Edit terminated by exiting the edit menu. Reset Returns all instrument parameters to predefined default states or values. Any pending GPIB or Ethernet I/O is aborted. Selectable from the system menu Master/Slave Operation Allows two output signals to be swept with a user-selected frequency offset. One instrument controls the other via AUX I/O connections. Requires a Master/Slave Interface Cable Set (part number ND36329). User Level Flatness Correction Allows user to calibrate out path loss due to external switching and cables via entered power le delivered	Single	
allows saving and recalling of instrument setups. Whenever the instrument is turned on, controcome on at the same functions and values existing when the instrument was turned off.Memory Sequencing InputAccepts a TTL low-level signal to sequence through ten stored setups. AUX I/O connector, rear panelSelf-TestInstrument self-test is performed when Self-Test soft-key is selected. If an error is detected, an message is displayed in a window on the LCD identifying the probable cause and remedy. Disables all frequency and power level state displays. Stored setups saved in secure mode remain secured when recalled. Mode selectable from a system menu and viia GPIB or Ethernet.Parameter EntryInstrument-controlled parameters can be entered in multiple ways: keypad, rotary data knob, i pads of the cursor-control key. Controlled parameters are frequency, power level, sweep time, and number of steps. Keypad entries are terminated by pressing the appropriate soft key. Edit terminated by exiting the edit menu.Master/Slave OperationAllows two output signals to be swept with a user-selected frequency offset. One instrument controls the other via AUX I/O and SERIAL I/O connections. Requires a Master/Slave Interface Cable Set (part number ND36329).User Level Flatness CorrectionAllows two output signals to be swept with a user-selected in sativated, entered power le delivered at the point where calibration was performed. Support dower meters or an Antifer and and 7000A. HP 437B, 438A, and 70100A. HP 437B, 438A, and 70100A.<		
AUX I/O connector, rear panel Instrument self-test is performed when Self-Test soft-key is selected. If an error is detected, an message is displayed in a window on the LCD identifying the probable cause and remedy. Secure Mode Disables all frequency and power level state displays. Stored setups saved in secure mode remain secured when recalled. Mode selectable from a system menu and via GPIB or Ethernet. Instrument-controlled parameters can be entered in multiple ways: keypad, rotary data knob, pads of the cursor-control key. Controlled parameters are frequency, power level, sweep time, and number of steps. Keypad entries are terminated by pressing the appropriate soft key. Edit terminated by exiting the edit menu. Reset Returns all instrument parameters to predefined default states or values. Any pending GPIB or Ethernet I/O is aborted. Selectable from the system menu Master/Slave Operation Allows two output signals to be swept with a user-selected frequency offset. One instrument controls the other via AUX I/O and SERIAL I/O connections. Requires a Master/Slave Interface Cable Set (part number ND36329). User Level Flatness Correction Allows user to calibrate out path loss due to external switching and cables via entered power le delivered at the point where calibration was performed. Supported power meters are Anritsu ML2437A, ML2438A, ML2480A/B, ML2490A, and ML4803A HP 437B, 438A, and 70100A. Five user tables are available with up to 801 points/table. Warm Up Time: From Standby: 30 minutes From Cold Start (0 °C): 120 hours to achieve specified frequency stability with aging. Power Standby With AC line power connected, unit is placed in standby when front panel power switch is relea:	Stored Setups	Stores front panel settings and nine additional front-panel setups in a non-volatile RAM. A system menu allows saving and recalling of instrument setups. Whenever the instrument is turned on, control setting: come on at the same functions and values existing when the instrument was turned off.
Self-Test Instrument self-test is performed when Self-Test soft-key is selected. If an error is detected, an message is displayed in a window on the LCD identifying the probable cause and remedy. Secure Mode Disables all frequency and power level state displays. Stored setups saved in secure mode remain secured when recalled. Mode selectable from a system menu and via GPIB or Ethernet. Parameter Entry Instrument-controlled parameters can be entered in multiple ways: keypad, rotary data knob, i pads of the cursor-control key. Controlled parameters are frequency, power level, sweep time, and number of steps. Keypad entries are terminated by pressing the appropriate soft key. Edit terminated by exiting the edit menu. Reset Returns all instrument parameters to predefined default states or values. Any pending GPIB or Ethernet I/O is aborted. Selectable from the system menu Master/Slave Operation Allows two output signals to be swept with a user-selected frequency offset. One instrument controls the other via AUX I/O and SERIAL I/O connections. Requires a Master/Slave Interface Cable Set (part number ND36329). User Level Flatness Correction Allows user to calibrate out path loss due to external switching and cables via entered power le delivered at the point where calibration was performed. Supported power meters are Anritsu ML2437A, ML2438A, ML2480A/B, ML2490A, and ML4803A HP 437B, 438A, and 70100A. Five user tables are available with up to 801 points/table. From Cold Start (0 °C): 120 hours to achieve sp	Memory Sequencing Input	
 Stored setups saved in secure mode remain secured when recalled. Mode selectable from a system menu and via GPIB or Ethernet. Parameter Entry Instrument-controlled parameters can be entered in multiple ways: keypad, rotary data knob, , pads of the cursor-control key. Controlled parameters are frequency, power level, sweep time, and number of steps. Keypad entries are terminated by pressing the appropriate soft key. Edit terminated by exiting the edit menu. Reset Returns all instrument parameters to predefined default states or values. Any pending GPIB or Ethernet I/O is aborted. Selectable from the system menu Master/Slave Operation Allows two output signals to be swept with a user-selected frequency offset. One instrument controls the other via AUX I/O and SERIAL I/O connections. Requires a Master/Slave Interface Cable Set (part number ND36329). User Level Flatness Correction Allows user to calibrate out path loss due to external switching and cables via entered power le delivered at the point where calibration was performed. Supported power meters are Anritsu ML2437A, ML2438A, ML2480A/B, ML2490A, and ML4803A HP 437B, 438A, and 70100A. Five user tables are available with up to 801 points/table. Warm Up Time: From Cold Start (0 °C): 120 hours to achieve specified frequency stability with aging Instruments disconnected from AC line power for more than 72 hours require 30 days to return frequency stability with aging. Power By VAC to 264 VAC, 48 Hz to 440 Hz, 250 VA maximum 	Self-Test	Instrument self-test is performed when Self-Test soft-key is selected. If an error is detected, an error
 Mode selectable from a system menu and via GPIB or Ethernet. Parameter Entry Instrument-controlled parameters can be entered in multiple ways: keypad, rotary data knob, pads of the cursor-control key. Controlled parameters are frequency, power level, sweep time, and number of steps. Keypad entries are terminated by pressing the appropriate soft key. Edit terminated by exiting the edit menu. Reset Returns all instrument parameters to predefined default states or values. Any pending GPIB or Ethernet I/O is aborted. Selectable from the system menu Master/Slave Operation Allows two output signals to be swept with a user-selected frequency offset. One instrument controls the other via AUX I/O and SERIAL I/O connections. Requires a Master/Slave Interface Cable Set (part number ND36329). User Level Flatness Correction Allows user to calibrate out path loss due to external switching and cables via entered power ledelivered at the point where calibration was performed. Supported power meters are Anritsu ML2437A, ML2480A/B, ML2490A, and ML4803A HP 437B, 438A, and 70100A. Five user tables are available with up to 801 points/table. Warm Up Time: From Standby: 30 minutes From Cold Start (0 °C): 120 hours to achieve specified frequency stability with aging Instruments disconnected from AC line power for more than 72 hours require 30 days to return frequency stability with aging. Power 85 VAC to 264 VAC, 48 Hz to 440 Hz, 250 VA maximum With AC line power connected, unit is placed in standby when front panel power switch is releated for the specified in standby when front panel power switch is releated for the specified in standby when front panel power switch is releated for the specified in standby when front panel power switch is releated for the power for	Secure Mode	
Parameter EntryInstrument-controlled parameters can be entered in multiple ways: keypad, rotary data knob, pads of the cursor-control key. Controlled parameters are frequency, power level, sweep time, and number of steps. Keypad entries are terminated by pressing the appropriate soft key. Edit terminated by exiting the edit menu.ResetReturns all instrument parameters to predefined default states or values. Any pending GPIB or Ethernet I/O is aborted. Selectable from the system menuMaster/Slave OperationAllows two output signals to be swept with a user-selected frequency offset. One instrument controls the other via AUX I/O and SERIAL I/O connections. Requires a Master/Slave Interface Cable Set (part number ND36329).User Level Flatness CorrectionAllows user to calibrate out path loss due to external switching and cables via entered power le delivered at the point where calibration was performed. Supported power meters are available with up to 801 points/table.Warm Up Time:From Standby: 30 minutes From Cold Start (0 °C): 120 hours to achieve specified frequency stability with aging Instruments disconnected from AC line power for more than 72 hours require 30 days to return frequency stability with aging. PowerPower85 VAC to 264 VAC, 48 Hz to 440 Hz, 250 VA maximumWith AC line power connected, unit is placed in standby when front panel power switch is releat		
ResetReturns all instrument parameters to predefined default states or values. Any pending GPIB or Ethernet I/O is aborted. Selectable from the system menuMaster/Slave OperationAllows two output signals to be swept with a user-selected frequency offset. One instrument controls the other via AUX I/O and SERIAL I/O connections. Requires a Master/Slave Interface Cable Set (part number ND36329).User Level Flatness CorrectionAllows user to calibrate out path loss due to external switching and cables via entered power to GPIB power meter or calculated data. When user level correction is activated, entered power le delivered at the point where calibration was performed. Supported power meters are Anritsu ML2437A, ML2438A, ML2480A/B, ML2490A, and ML4803A HP 437B, 438A, and 70100A. Five user tables are available with up to 801 points/table.Warm Up Time:From Standby: 30 minutes From Cold Start (0 °C): 120 hours to achieve specified frequency stability with aging Instruments disconnected from AC line power for more than 72 hours require 30 days to return frequency stability with aging.Power85 VAC to 264 VAC, 48 Hz to 440 Hz, 250 VA maximumWith AC line power connected, unit is placed in standby when front panel power switch is releas	Parameter Entry	Instrument-controlled parameters can be entered in multiple ways: keypad, rotary data knob, or the tou pads of the cursor-control key. Controlled parameters are frequency, power level, sweep time, dwell tim and number of steps. Keypad entries are terminated by pressing the appropriate soft key. Edits are
Selectable from the system menu Master/Slave Operation Allows two output signals to be swept with a user-selected frequency offset. One instrument controls the other via AUX I/O and SERIAL I/O connections. Requires a Master/Slave Interface Cable Set (part number ND36329). User Level Flatness Correction Allows user to calibrate out path loss due to external switching and cables via entered power to GPIB power meter or calculated data. When user level correction is activated, entered power le delivered at the point where calibration was performed. Supported power meters are Anritsu ML2437A, ML2438A, ML2480A/B, ML2490A, and ML4803A HP 437B, 438A, and 70100A. Five user tables are available with up to 801 points/table. Warm Up Time: From Standby: 30 minutes From Cold Start (0 °C): 120 hours to achieve specified frequency stability with aging Instruments disconnected from AC line power for more than 72 hours require 30 days to return frequency stability with aging. Power 85 VAC to 264 VAC, 48 Hz to 440 Hz, 250 VA maximum With AC line power connected, unit is placed in standby when front panel power switch is releas	Reset	
Master/Slave OperationAllows two output signals to be swept with a user-selected frequency offset. One instrument controls the other via AUX I/O and SERIAL I/O connections. Requires a Master/Slave Interface Cable Set (part number ND36329).User Level Flatness CorrectionAllows user to calibrate out path loss due to external switching and cables via entered power to GPIB power meter or calculated data. When user level correction is activated, entered power le delivered at the point where calibration was performed. Supported power meters are Anritsu ML2437A, ML2438A, ML2480A/B, ML2490A, and ML4803A HP 437B, 438A, and 70100A. Five user tables are available with up to 801 points/table.Warm Up Time:From Standby: 30 minutes From Cold Start (0 °C): 120 hours to achieve specified frequency stability with aging Instruments disconnected from AC line power for more than 72 hours require 30 days to return frequency stability with aging.Power85 VAC to 264 VAC, 48 Hz to 440 Hz, 250 VA maximumWith AC line power connected, unit is placed in standby when front panel power switch is released		
One instrument controls the other via AUX I/O and SERIAL I/O connections. Requires a Master/Slave Interface Cable Set (part number ND36329). User Level Flatness Correction Allows user to calibrate out path loss due to external switching and cables via entered power to GPIB power meter or calculated data. When user level correction is activated, entered power le delivered at the point where calibration was performed. Supported power meters are Anritsu ML2437A, ML2438A, ML2480A/B, ML2490A, and ML4803A HP 437B, 438A, and 70100A. Five user tables are available with up to 801 points/table. Warm Up Time: From Standby: 30 minutes From Cold Start (0 °C): 120 hours to achieve specified frequency stability with aging Instruments disconnected from AC line power for more than 72 hours require 30 days to return frequency stability with aging. Power 85 VAC to 264 VAC, 48 Hz to 440 Hz, 250 VA maximum With AC line power connected, unit is placed in standby when front panel power switch is releas	Master/Slave Operation	
User Level Flatness CorrectionAllows user to calibrate out path loss due to external switching and cables via entered power to GPIB power meter or calculated data. When user level correction is activated, entered power le delivered at the point where calibration was performed. Supported power meters are Anritsu ML2437A, ML2438A, ML2480A/B, ML2490A, and ML4803A HP 437B, 438A, and 70100A. Five user tables are available with up to 801 points/table.Warm Up Time:From Standby: 30 minutes From Cold Start (0 °C): 120 hours to achieve specified frequency stability with aging Instruments disconnected from AC line power for more than 72 hours require 30 days to return frequency stability with aging.Power85 VAC to 264 VAC, 48 Hz to 440 Hz, 250 VA maximum With AC line power connected, unit is placed in standby when front panel power switch is released.		
 GPIB power meter or calculated data. When user level correction is activated, entered power ledelivered at the point where calibration was performed. Supported power meters are Anritsu ML2437A, ML2438A, ML2480A/B, ML2490A, and ML4803A HP 437B, 438A, and 70100A. Five user tables are available with up to 801 points/table. Warm Up Time: From Standby: 30 minutes From Cold Start (0 °C): 120 hours to achieve specified frequency stability with aging Instruments disconnected from AC line power for more than 72 hours require 30 days to return frequency stability with aging. Power 85 VAC to 264 VAC, 48 Hz to 440 Hz, 250 VA maximum With AC line power connected, unit is placed in standby when front panel power switch is released. 		
HP 437B, 438A, and 70100A. Five user tables are available with up to 801 points/table. Warm Up Time: From Standby: 30 minutes From Cold Start (0 °C): 120 hours to achieve specified frequency stability with aging Instruments disconnected from AC line power for more than 72 hours require 30 days to return frequency stability with aging. Power 85 VAC to 264 VAC, 48 Hz to 440 Hz, 250 VA maximum Standby With AC line power connected, unit is placed in standby when front panel power switch is releas	User Level Flatness Correction	Allows user to calibrate out path loss due to external switching and cables via entered power table from GPIB power meter or calculated data. When user level correction is activated, entered power levels are delivered at the point where calibration was performed.
 Warm Up Time: From Standby: 30 minutes From Cold Start (0 °C): 120 hours to achieve specified frequency stability with aging Instruments disconnected from AC line power for more than 72 hours require 30 days to return frequency stability with aging. Power 85 VAC to 264 VAC, 48 Hz to 440 Hz, 250 VA maximum Standby With AC line power connected, unit is placed in standby when front panel power switch is released. 		
Instruments disconnected from AC line power for more than 72 hours require 30 days to return frequency stability with aging. Power 85 VAC to 264 VAC, 48 Hz to 440 Hz, 250 VA maximum Standby With AC line power connected, unit is placed in standby when front panel power switch is releas	Warm Up Time:	
frequency stability with aging. Power 85 VAC to 264 VAC, 48 Hz to 440 Hz, 250 VA maximum Standby With AC line power connected, unit is placed in standby when front panel power switch is relea:		From Cold Start (0 °C): 120 hours to achieve specified frequency stability with aging Instruments disconnected from AC line power for more than 72 hours require 30 days to return to specif
Standby With AC line power connected, unit is placed in standby when front panel power switch is released	Dower	frequency stability with aging.
of Elone position.		With AC line power connected, unit is placed in standby when front panel power switch is released from to OPERATE position.
Weight 18 kg maximum	-	5
Dimensions (WxHxD) 429 mm x 133 mm x 450 mm Warranty 3 years from ship date		

G3690C	Specification
Markers	
Description	Up to 20 independent, settable markers (F0 – F9 and M0 – M9)
Video Markers	+5 V or –5 V marker output, selectable from system menus
	AUX I/O connector, rear panel
Intensity Markers	Produces an intensity dot on analog display traces, obtained by a momentary dwell in RF sweep, in analo sweeps of < 1 second.
Marker Accuracy	Same as sweep frequency accuracy
Marker Resolution:	Analog Sweep: 1 MHz or Sweep Width/4096, which ever is greater
	Step Sweep: 0.01 Hz
Remote Operation	
Description	All instrument functions, settings, and operating modes (except for power on/standby) are controllable using commands sent from an external computer via Ethernet (VXI-11 over TCP/IP) or GPIB (IEEE-488 interface bus).
	Note: For users who wish to use a USB control interface, the following adapter available from National Instruments is recommended:
Education De d	USB: NI GPIB-USB-MS
Ethernet Port	10/100 Base-T
Ethernet Address	DHCP with Auto-IP 169.254.90.55 (default) or static 192.168.0.254
GPIB Address	Selectable from a system menu
GPIB Commands	Native, SCPI
IEEE -488 Interface Function Subset	Source Handshake: SH1
	Acceptor Handshake: AH1
	Talker: T6
	Listener: L4
	Service Request: SR1
	Remote/Local: RL1
	Parallel Poll: PP1
	Device Clear: DC1
	Device Trigger: DT1
	Controller Capability: C0, C1, C2, C3, C28
CDID Status Assussisters	Tri-State Driver: E2
GPIB Status Annunciators	When the instrument is operating in Remote, the GPIB status annunciators (listed below) will appear in a window on the front panel LCD.
Remote	Operating on the GPIB or via Ethernet, all instrument front panel keys are ignored, except for the SYSTEN key and the RETURN TO LOCAL soft key.
LLO (Local Lockout)	Disables the RETURN TO LOCAL soft key. Instrument can be placed in local mode only via Ethernet or GPI or by cycling line power.
Emulations	The instrument responds to the published GPIB commands and responses of the Anritsu Models 6600, 6700, and 6XX00-series signal sources. When emulating another signal source, the instrument will be limited to the capabilities, mnemonics, and parameter resolutions of the emulated instrument.

Environmental (MIL-PRF-28800F, class 3)

Storage Temperature Range	–40 °C to +75 °C
Operating Temperature Range	0 °C to +50 °C
Relative Humidity	5 % to 95 % at 40 °C (non-condensing)
Altitude	4,600 m, 43.9 cm-Hg
Vibration	Random, 5 Hz to 500 Hz, 0.015 to 0.0039 g ² /Hz PSD; Sinusoidal, 5 Hz to 55 Hz, 0.33 mm displacement
EMC	IEC 61326-1:2013
Safety	IEC 61010-1:2010

Regulatory Compliance

European Union	EMC 2014/30/EU, EN 61326:2013, CISPR 11/EN 55011, IEC/EN 61000-4-2/3/4/5/6/8/11 Low Voltage Directive 2014/35/EU Safety EN 61010-1:2010 RoHS Directive 2011/65/EU applies to instruments with CE marking and noted as Rev. 2 or above on the rear panel.
Australia and New Zealand	RCM AS/NZS 4417:2012
Canada	ICES-1(A)/NMB-1(A)
South Korea	KCC-REM-A21-0004

Specifications

Frequency Switching Time

equency switching time	
Definitions	
Free Running Mode	Step or List Sweep
	t _{sw} =Switching Time, Unlocked
Lock Status Indicator	Rear Panel AUX I/O connector (pin 11)
	The lock status indicator goes high when the output is within 1 kHz of the final frequency.
	t _{lk} = Locked Time = 1 ms + t _{dw}
	t _{dw} = Dwell Time, after locking. Selectable, 1 ms minimum
	t _{lk} (min) = 2 ms
	(Locked) t_{sw} t_{lk} (Unlocked) t_r = Trigger Response Time = 2 ms (Applies to GPIB, Ethernet and External TTL triggers)
	gger
(
Loc	×
	tus
	← t _n , →
	→ t, +
	•

Switching Time (tsw)	
tsw ^a (ms)	Condition
5 ms + 1 ms/GHz Step not starting at, or crossing dwell frequencies	
7 ms + 1 ms/GHz (typical) Step not starting at, or crossing band switching frequencies	
8 ms + 1 ms/GHz (typical) Step starting at, or crossing band switching frequencies	
Not applicable with EM mode active	<u>.</u>

a. Not applicable with FM mode active.

Band Switching Dwell Frequencies	2 (2.2 with Option 4), 10, 20, 40 GHz
Filter Switching Dwell Frequencies	3.3, 5.5, 8.4, 13.25, 25, 32 GHz
< 2.2 GHz w/Option 4	12.5, 15.625, 22.5, 31.25, 43.75, 62.5, 87.5, 125, 175, 250, 350, 500, 700, 1050, 1500 MHz

Signal Purity

All specifications apply at the lesser of +10 dBm output or maximum specified leveled output power unless otherwise noted.

Harmonic and Harmonic-Related		
Frequency Range	Standard	
0.1 Hz to 10 MHz (Option 22)	< -30 dBc	
10 MHz to \leq 100 MHz (Option 4)	< -40 dBc	
> 100 MHz to ≤ 2.2 GHz (Option 4)	< –50 dBc	
10 MHz to \leq 50 MHz (Option 5)	< -30 dBc	
> 50 MHz to < 2 GHz (Option 5)	< -40 dBc	
2 GHz (> 2.2 GHz w/Option 4) to \leq 20 GHz	< -60 dBc ^a	
> 20 GHz to ≤ 40 GHz	< -40 dBc ^{a,b}	
> 40 GHz to ≤ 50 GHz (MG3695C)	< -40 dBc ^a	
> 40 GHz to ≤ 67 GHz (MG3697C)	< –25 dBc	

a. -30 dBc typical with high power Option 15.

b. 20 GHz to 21 GHz, and 39 GHz to 40 GHz, -20 dBc typical (Option 15 only).

Non-Harmonic

Frequency Range	Standard
0.1 Hz to 10 MHz (Option 22)	< -30 dBc
10 MHz to \leq 2.2 GHz (Option 4)	< -60 dBc
10 MHz to \leq 2 GHz (Option 5)	< -40 dBc
> 2 GHz (2.2 GHz w/Option 4) to \leq 67 GHz	< -60 dBc

Power Line and Fan Rotation Spurious Emissions (dBc)

	Offset from Carrier			
Frequency	300 Hz	300 Hz to 1 kHz	>1 kHz to 3 kHz	
10 MHz to \leq 500 MHz (Option 4)	< -68	< -72	< -72	
> 500 MHz to ≤ 1050 MHz (Option 4)	< -62	< -72	< -72	
> 1050 MHz to ≤ 2200 MHz (Option 4)	< -56	< -66	< -66	
0.01 GHz to ≤ 8.4 GHz	< -50	< -60	< -60	
> 8.4 GHz to ≤ 20 GHz	< -46	< -56	< -60	
> 20 GHz to \leq 40 GHz	< -40	< -50	< -54	
> 40 GHz to ≤ 67 GHz	< -34	< -44	< -48	

Residual FM

CW and Step Sweep modes, 50 Hz to 15 kHz BW (typical). Note: Residual FM is not applicable with FM locked mode

Residual FM (Hz RMS) Option 3/3X Standard **Frequency Range** < 120 \leq 8.4 GHz < 40 > 8.4 GHz to 20 GHz < 40 < 220 $> 20 \text{ GHz to} \le 40 \text{ GHz}$ < 80 < 440 > 40 GHz to \leq 67 GHz < 160 < 880

Residual FM

Analog Sweep and Unlocked FM modes, 50 Hz to 15 kHz BW (typical) Note: Residual FM is not applicable with FM locked mode

	Residual FM (kHz RMS)			
Frequency Range	Unlocked Narrow FM mode	Unlocked Wide FM mode or Analog Sweep (typical)		
0.01 GHz to ≤ 20 GHz	< 10	< 25		
> 20 GHz to ≤ 40 GHz	< 20	< 50		
> 40 GHz to \leq 67 GHz	< 40	< 100		

AM Noise Floor

Typically < -145 dBm/Hz at 0 dBm output and offsets > 5 MHz from carrier

Single-Sideband Phase Noise

Phase noise is specified and guaranteed only with internal reference. In External Reference mode, the phase noise of the external supplied reference, and the selected external reference bandwidth, will dictate the instrument phase noise performance. Phase noise is not degraded when adding high power Option 15. Phase noise measured at +10 dBm < 5 GHz and +6 dBm \geq 5 GHz.

Single-Sideband Phase Noise (dBc/Hz): (Typical)

Frequency Range	10 Hz	100 Hz	1 kHz	10 kHz	100 kHz	1 MHz
0.1 Hz to < 10 MHz (Option 22)	-80 (-100)	-90 (-110)	-120 (-125)	-130 (-139)	-130 (-141)	-130 (-141)
10 MHz to 15.625 MHz (Option 4)	-102 (-113)	-128 (-133)	-142 (-149)	-145 (-152)	-145 (-153)	-145 (-153)
> 15.625 MHz to 31.25 MHz (Option 4)	-97 (-109)	-125 (-130)	-142 (-147)	-144 (-149)	-144 (-153)	-145 (-155)
> 31.25 MHz to 62.5 MHz (Option 4)	-92 (-104)	-122 (-128)	-140 (-146)	-142 (-146)	-143 (-150)	-145 (-155)
> 62.5 MHz to 125 MHz (Option 4)	-87 (-98)	-114 (-118)	-133 (-139)	-130 (-140)	-130 (-143)	-145 (-155
> 125 MHz to 250 MHz (Option 4)	-82 (-93)	-108 (-113)	-126 (-134)	-124 (-134)	-124 (-138)	-145 (-153
> 250 MHz to 500 MHz (Option 4)	-75 (-87)	-102 (-109)	-120 (-128)	-118 (-127)	-118 (-130)	-143 (-149
> 500 MHz to 1050 MHz (Option 4)	-70 (-80)	-94 (-100)	-115 (-123)	-115 (-122)	-116 (-126)	-138 (-144
> 1050 MHz to 2200 MHz (Option 4)	-65 (-74)	-86 (-96)	-113 (-117)	-111 (-116)	-114 (-120)	-133 (-139
10 MHz to < 2000 MHz (Option 5)	-62 (-72)	-85 (-95)	-100 (-104)	-102 (-106)	-102 (-106)	-111 (-114
2 GHz to 6 GHz	-54 (-64)	-81 (-88)	-102 (-109)	-103 (-110)	-106 (-114)	-128 (-133
> 6 GHz to 10 GHz	-52 (-62)	-75 (-85)	-98 (-106)	-104 (-109)	-106 (-113)	-126 (-132
> 10 GHz to 20 GHz	-45 (-55)	-69 (-78)	-92 (-101)	-98 (-103)	-98 (-106)	-124 (-131
> 20 GHz to 40 GHz	-38 (-48)	-62 (-72)	-86 (-94)	-92 (-100)	-92 (-100)	-118 (-124
> 40 GHz to 67 GHz	-32 (-42)	-56 (-66)	-80 (-88)	-87 (-94)	-82 (-91)	-112 (-118

Single-Sideband Phase Noise	(dBc/Hz) – Optio	n 3: (Typical)				
Frequency Range	10 Hz	100 Hz	1 kHz ^a	10 kHz ^a	100 kHz	1 MHz
0.1 Hz to < 10 MHz (Option 22)	-80 (-100)	-90 (-110)	-120 (-125)	-130 (-139)	-130 (-141)	-130 (-141
10 MHz to 15.625 MHz (Option 4)	-102 (-120)	-128 (-140)	-142 (-150)	-145 (-152)	-148 (-153)	-148 (-152
> 15.625 MHz to 31.25 MHz (Option 4)	-97 (-108)	-125 (-128)	-142 (-149)	-145 (-153)	-148 (-153)	-148 (-155
> 31.25 MHz to 62.5 MHz (Option 4)	-92 (-109)	-122 (-131)	-140 (-146)	-145 (-153)	-148 (-153)	-148 (-156
> 62.5 MHz to 125 MHz (Option 4)	-87 (-98)	-114 (-118)	-134 (-139)	-142 (-147)	-143 (-148)	-148 (-155
> 125 MHz to 250 MHz (Option 4)	-82 (-93)	-108 (-113)	-129 (-134)	-138 (-143)	-137 (-142)	-148 (-153
> 250 MHz to 500 MHz (Option 4)	-77 (-91)	-102 (-114)	-124 (-130)	-132 (-137)	-128 (-137)	-144 (-153
> 500 MHz to 1050 MHz (Option 4)	-72 (-83)	-98 (-103)	-119 (-123)	-126 (-132)	-122 (-132)	-139 (-150
> 1050 MHz to 2200 MHz (Option 4)	-66 (-77)	-92 (-101)	-113 (-119)	-121 (-126)	-117 (-125)	-135 (-146
10 MHz to < 2000 MHz (Option 5)	-64 (-72)	-85 (-95)	-100 (-104)	-102 (-106)	-102 (-106)	-111 (-114
2 GHz to 6 GHz	-54 (-77)	-82 (-93)	-106 (-111)	-115 (-119)	-112 (-119)	-136 (-140
> 6 GHz to 10 GHz	-52 (-73)	-75 (-88)	-102 (-109)	-113 (-119)	-115 (-120)	-134 (-140
> 10 GHz to 20 GHz	-52 (-66)	-69 (-82)	-100 (-105)	-109 (-115)	-109 (-115)	-130 (-137
> 20 GHz to 40 GHz	-45 (-59)	-63 (-75)	-94 (-98)	-104 (-108)	-103 (-109)	-122 (-131
> 40 GHz to 67 GHz	-40 (-51)	-58 (-68)	-89 (-91)	-97 (-103)	-97 (-103)	-118 (-125

a. When fitted with Option 36 and when multiple units are connected for purposes of Ultra-Stable Phase Tracking, phase noise may be degraded by up to 4 dB at 1 kHz and 10 kHz offsets.


Single-Sideband Phase Noise

(dBc/Hz) – Option 3X: (Typical)

	Offset from Carrier						
Frequency Range	1 Hz	10 Hz	100 Hz	1 kHz ^a	10 kHz ^a	100 kHz	1 MHz
0.1 Hz to < 10 MHz (Option 22)	-60 (-70)	-80 (-100)	-90 (-110)	-120 (-125)	-130 (-139)	-130 (-141)	-130 (-141)
10 MHz to 15.625 MHz (Option 4)	-94 (-103)	-118 (-128)	-136 (-141)	-142 (-150)	-145 (-152)	-148 (-153)	-148 (-152)
> 15.625 MHz to 31.25 MHz (Option 4)	-88 (-96)	-113 (-123)	-130 (-137)	-142 (-149)	-145 (-153)	-148 (-153)	–148 (–155)
> 31.25 MHz to 62.5 MHz (Option 4)	-83 (-90)	-109 (-118)	-125 (-133)	-140 (-146)	-145 (-153)	-148 (-153)	-148 (-156)
> 62.5 MHz to 125 MHz (Option 4)	-77 (-86)	-103 (-111)	-119 (-127)	-134 (-139)	-142 (-147)	-143 (-148)	-148 (-155)
> 125 MHz to 250 MHz (Option 4)	-71 (-81)	-97 (-104)	-113 (-121)	-129 (-134)	-138 (-143)	-137 (-142)	-148 (-153)
> 250 MHz to 500 MHz (Option 4)	-67 (-76)	-91 (-98)	-107 (-115)	-124 (-130)	-132 (-137)	-128 (-137)	-144 (-153)
> 500 MHz to 1050 MHz (Option 4)	-60 (-69)	-84 (-92)	-101 (-109)	-119 (-123)	-126 (-132)	-122 (-132)	-139 (-150)
> 1050 MHz to 2200 MHz (Option 4)	-53 (-62)	-77 (-87)	-95 (-103)	-113 (-119)	-121 (-126)	-117 (-125)	-135 (-146)
10 MHz to < 2000 MHz (Option 5)	-38 (-45)	-68 (-78)	-85 (-95)	-100 (-104)	-102 (-106)	-102 (-106)	-111 (-114)
2 GHz to 6 GHz	-46 (-52)	-70 (-77)	-86 (-94)	-106 (-111)	-115 (-119)	-112 (-119)	-136 (-140)
> 6 GHz to 10 GHz	-38 (-46)	-68 (-77)	-83 (-91)	-102 (-109)	-113 (-119)	–115 (–120)	-134 (-140)
> 10 GHz to 20 GHz	-35 (-42)	-64 (-72)	-80 (-85)	-100 (-105)	-109 (-115)	-109 (-115)	-130 (-137)
> 20 GHz to 40 GHz	-29 (-36)	-58 (-65)	-74 (-79)	-94 (-98)	-104 (-108)	-103 (-109)	-122 (-131)
> 40 GHz to 67 GHz	-23 (-30)	-53 (-59)	-69 (-73)	-89 (-91)	-97 (-103)	-97 (-103)	–118 (–125)

a. When fitted with Option 36 and when multiple units are connected for purposes of Ultra-Stable Phase Tracking, phase noise may be degraded by up to 4 dB at 1 kHz and 10 kHz. offsets.

Measured SSB Phase Noise

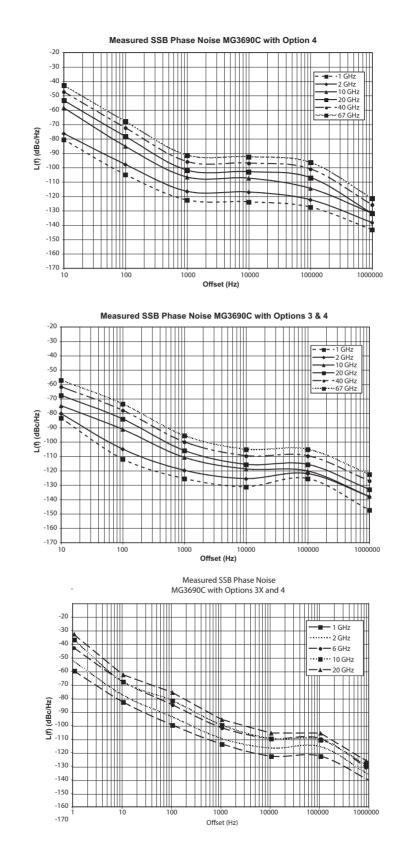

RF Output

Power level specifications apply at 25 ± 10 °C.

Maximum Leveled Output Power

For output power with Option 22, 0.1 Hz to 10 MHz coverage, derate all specifications by 2 dB.

Model Number	Configuration	Frequency Range (GHz)	Output Power (dBm)	Output Power with Step Attenuator (dBm)	Output Power wit Electronic Step Attenuator (dBm)	
	With opt 4 or 5	< 2 ^a	+19	+18		
MG3692C	STD	≥ 2 ^a to ≤ 10	+19	+18	Not Available	
	STD	> 10 to ≤ 20	+17	+15		
	With opt 4 or 5	< 2 ^a	+15	+14		
MG3694C	STD	≥ 2 ^b to 10	+15	+14	Not Available	
	STD	> 10 to ≤ 20	+12	+10		
	STD	> 20 to ≤ 40	+9	+6		
	With opt 4 or 5	< 2 ^a	+12	+10		
MG3695C	STD	$\geq 2^{b}$ to ≤ 20	+10	+8		
MG3095C	STD	> 20 to ≤ 40	+6	+3	Not Available	
	STD	> 40 to ≤ 50	+3	+0		
	With opt 4 or 5	< 2 ^a	+12	+10		
MG3697C	STD	$\geq 2^{b}$ to ≤ 20		Not Available		
WIG209/C	STD	> 20 to ≤ 40	+6	+3	INOL AVAIIDDIE	
	STD	> 40 to ≤ 67	+3	+0 ^c		

Maximum Leveled Output Power with Option 15 (High Power) Installed

For output power with Option 22, 0.1 Hz to 10 MHz coverage, derate all specifications by 2 dB.

/lodel Number	Configuration	Frequency Range (GHz)	Output Power (dBm)	Output Power with Step Attenuator (dBm)	Output Power wit Electronic Step Attenuator (dBm)
			I		
		< 2 ^a	+19	+18	
	With opt 4 or 5	2 ^b to 10	+25	+24	
	with opt 4 or 5	> 10 to 16	+22	+20	
MG3692C		> 16 to 20	+21	+19	Not Available
		2 to 10	+26	+25	
	Without opt 4 or 5	> 10 to 16	+25	+23	
		> 16 to 20	+23	+21	
	1 1	< 2 ^a	+17	+16	
	Mith ant 4 au F	$\geq 2^{b}$ to ≤ 20			
14626046	With opt 4 or 5 Without opt 4 or 5 Without opt 4 or 5	$\geq 2^{\circ}$ to ≤ 20 > 20 to ≤ 40	+21 +17	+19 +15	Not Available
MG3694C				-	NOT AVAIIADIE
		≥ 2 to ≤ 20	+23	+21	
		> 20 to ≤ 40	+19	+17	
With opt 4 or 5	< 2 ^a	+16	+14		
		$\geq 2^{b}$ to ≤ 20	+21	+19	
	with opt 4 or 5	> 20 to ≤ 40	+17	+15	
MG3695C		> 40 to ≤ 50	+11	+8	Not Available
		\geq 2 to \leq 20	+23	+21	
	Without opt 4 or 5	> 20 to ≤ 40	+19	+17	
		> 40 to \le 50	+13	+10	
		< 2 ^a	+16	+15	
		$\geq 2^{b}$ to ≤ 20	+10	+15	
	With opt 4 or 5	$\geq 2^{\circ}$ to ≤ 20 > 20 to ≤ 40	+19	+18	
	With opt 4 or 5	> 20 to \leq 40	+9	+14 +6 ^c	
MG3697C		$> 40 \text{ to } \le 67$ > 67 to ≤ 70	+3d	0d	Not Available
WIG2097C		≥ 2 to ≤ 20	+3-	+19	NUL AVAIIADIE
		$\geq 2 \text{ to } \leq 20$ > 20 to ≤ 40	+21	+19	
	Without opt 4 or 5	$> 20 \text{ to } \le 40$ > 40 to ≤ 67	+19	+16 +6 ^c	
		$> 40 \ to \le 67$ > 67 to ≤ 70	+9	-0 ^d	
≤ 2.2 GHz with Opti		> 0/ 10 \(10	+3	U	

2.2 GHz with Option

b. > 2.2 GHz with Option 4

c. Typical 60 GHz to 67 GHz d. Typical

Minimum Settable Output Power					
Without an Attenuator	-20 dBm				
With an Attenuator	–120 dBm				
Minimum Leveled Output Power					
Without an Attenuator	–15 dBm (–20 dBm, typical)				
With an Attenuator	–115 dBm (MG3692C and MG3694C)				
	–105 dBm (MG3695C, and MG3697C)				
Unleveled Output Power Range	(typical)				
Without an Attenuator	> 40 dB below max power				
With an Attenuator	> 130 dB below max power				
Power Level Switching Time	(To within specified accuracy)				
Without Change in Step Attenuator	< 3 ms typical				
With Change in Step Attenuator	< 20 ms typical				
With Change in Electronic Step Attenuator	< 3 ms typical				
	Power level changes across –70 dB step will result in 20 ms delay.				
Step Attenuator (Option 2)	Adds a 10 dB/step attenuator				
-	110 dB range on models ≤ 40 GHz				
	90 dB range on models > 40 GHz				

Accuracy and Flatness

Flatness is included within the accuracy specification.

Step Sweep and CW Modes

Attenuation Below	Frequency (GHz)				
Max Power	≤ 40 ^{a,b}	40 to 50	50 to 60	60 to 67	
Accuracy			•		
0 dB to 25 dB	± 1.0 dB	± 1.5 dB	± 1.5 dB	± 1.5 dB	
25 dB to 60 dB	± 1.0 dB	± 1.5 dB	± 3.5 dB ^c	N/A	
60 dB to 100 dB	± 1.0 dB	± 2.5 dB ^c	± 3.5 dB ^c	N/A	
Flatness					
0 dB to 25 dB	± 0.8 dB	± 1.1 dB	± 1.1 dB	± 1.1 dB	
25 dB to 60 dB	± 0.8 dB	± 1.1 dB	± 3.1 dB ^c	N/A	
60 dB to 100 dB	± 0.8 dB	± 2.1 dB ^c	± 3.1 dB ^c	N/A	


a. With high power Option 15, Accuracy and Flatness are \pm 1.5 dB.

b. Below 20 MHz, Accuracy and Flatness are \pm 1.5 dB.

c. Typical

Analog Sweep Moo	de de	(Typical)		
Attenuation Below		Frequen	cy (GHz)	
Max Power	0.01 to 0.05	0.05 to 20	20 to 40	40 to 67
Accuracy	· · · ·			
0 dB to 12 dB	± 2.0 dB	± 2.0 dB	± 2.0 dB	± 3.0 dB
12 dB to 30 dB	± 3.5 dB	± 3.5 dB	± 4.6 dB	± 5.6 dB
30 dB to 60 dB	± 4.0 dB	± 4.0 dB	± 5.2 dB	± 6.2 dB
60 dB to 122 dB	± 5.0 dB	± 5.0 dB	± 6.2 dB	± 7.2 dB
Flatness				
0 dB to 12 dB	± 2.0 dB	± 2.0 dB	± 2.0 dB	± 2.5 dB
12 dB to 30 dB	± 3.5 dB	± 3.5 dB	± 4.1 dB	± 5.1 dB
30 dB to 60 dB	± 4.0 dB	± 4.0 dB	± 4.6 dB	± 5.6 dB
60 dB to 122 dB	± 5.0 dB	± 5.0 dB	± 5.2 dB	± 6.2 dB

Specifications

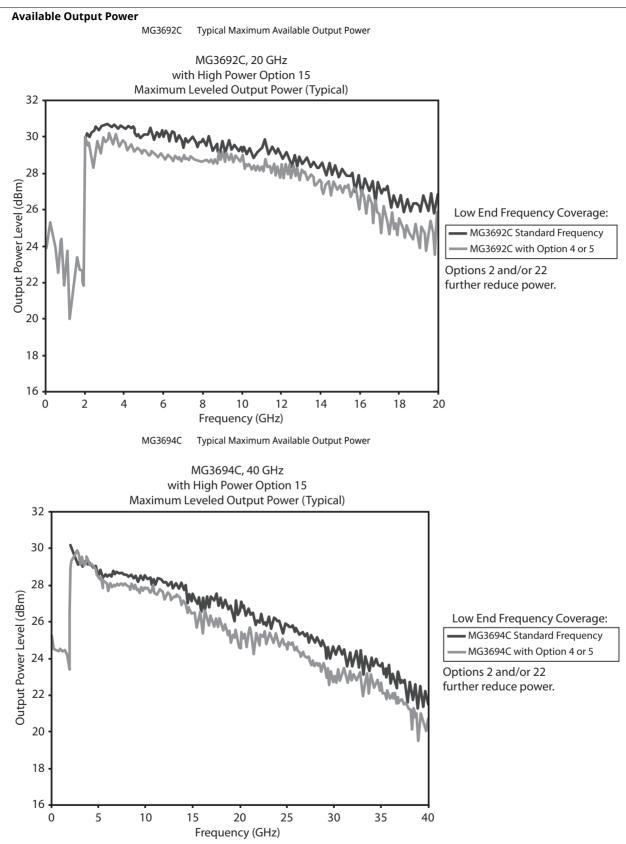

Other RF Output Power Specifications

Other KF Output Power Speci						
Output Units	Output units selectable are in the selected units	as either dBm or mV. Selection of mV assumes a 50 Ω load. All data entry and display s.				
Output Power Resolution	0.01 dB or 0.001 mV					
Output Impedance	50 Ω nominal					
Output SWR (Internal Leveling)	< 2.0 typical					
Power Level Stability with Temperature	± 0.04 dB/°C typical					
Level Offset	Offsets the displayed po	ower level to establish a new reference level.				
Output On/Off		between an Off and On state. During the Off state, the RF oscillator is turned off. The ited by two LEDs located below the OUTPUT ON/OFF key on the front panel.				
RF On/Off Between Frequency Steps	System menu selection of RF On or RF Off during frequency switching in CW, Step Sweep, and List Sweep modes.					
RF On/Off During Retrace	System menu selection	of RF On or RF Off during retrace.				
Internal Leveling	Power is leveled at the	output connector in all modes.				
External Leveling	External Detector	Levels output power at a remote detector location. Accepts a positive or negative 0.5 mV to 500 mV input signal from the remote detector. L1 adjusts the input signal range to an optimum value. BNC connector, rear panel				
	External Power Meter	Levels output power at a remote power meter location. Accepts a ± 1 V full scale input signal from the remote power meter. L1 adjusts the input signal range to an optimum value. BNC connector, rear panel				
	External Leveling Bandwidth	30 kHz typical in Detector mode 0.7 Hz typical in Power Meter mode				
	User Level Flatness Correction	Number of points: 2 to 801 points per table Number of tables: 5 available Entry modes: GPIB power meter or computed data				
CW Power Sweep						
Range	Sweeps between any tw	vo power levels at a single CW frequency.				
Resolution	0.01 dB/step (Log) or 0.	001 mV (Linear)				
Accuracy	Same as CW power accu	uracy				
Log/Linear Sweep	Power sweep selectable	e as either log or linear. Log sweep is in dB; linear sweep is in mV.				
Step Size	User-controlled, 0.01 dB	3 (Log) or 0.001 mV (Linear) to the full power range of the instrument.				
Step Dwell Time		9 seconds. If the sweep crosses a step attenuator setting, there will be a sweep dwell to allow setting of the step attenuator.				
Sween Frequency/Sten Power						

Sweep Frequency/Step Power

A power level step occurs after each frequency sweep.

Power level remains constant for the length of time required to complete each sweep.

Modulation

Frequency/Phase Modulation (Option 12)

Frequency/Phase Modulation is not available <10 MHz with Option 22. Option 12 adds frequency and phase modulation, driven externally via a rear panel BNC connector, 50 W. For internal modulation, add Internal LF Generator and Pulse Generator Option 27.

For the most accurate FM and ΦM measurements, Bessel Null methods are used. When verifying FM and ΦM, the use of the "carrier null" technique is recommended. Measured residual FM effects must be subtracted from modulation meter measurements.

Frequency Generator Multiplication/Division Ratios

Frequency Range	Divide Ratio, n
< 10 MHz (Option 22)	Modulation not available
\geq 10 MHz to \leq 15.625 MHz (Option 4)	256
> 15.625 MHz to ≤ 31.25 MHz (Option 4)	128
> 31.25 MHz to ≤ 62.5 MHz (Option 4)	64
> 62.5 MHz to ≤ 125 MHz (Option 4)	32
> 125 MHz to ≤ 250 MHz (Option 4)	16
> 250 MHz to ≤ 500 MHz (Option 4)	8
> 500 MHz to ≤ 1050 MHz (Option 4)	4
> 1050 MHz to ≤ 2200 MHz (Option 4)	2
> 10 MHz to ≤ 2000 MHz (Option 5)	1
> 2 GHz to ≤ 20 GHz	1
> 20 GHz to ≤ 40 GHz	1/2
> 40 GHz to ≤ 67 GHz	1/4

Frequenc	y Modulation					
			encies other than with Option 4	For Frequencies < 2.2 GHz with Option 4		
Parameter	Modes	Conditions	Specifications	Conditions	Specifications	
	Locked	Rate = 1 kHz to 8 MHz	± [Lesser of 10 MHz or (300 * mod rate)]/n	Rate = 1 kHz to Lesser of 8 MHz or (0.03 * F _{carrier})	± [Lesser of 10 MHz or (300 * mod rate)]/n	
Deviation	Locked Low-noise	Rate = 50 kHz to 8 MHz	± [Lesser of 10 MHz or (3 * mod rate)]/n	Rate = 50 kHz to Lesser of 8 MHz or (0.03 * F _{carrier})	± [Lesser of 10 MHz or (3 * mod rate)]/n	
	Unlocked Narrow	Rate = DC to 8 MHz	± 10 MHz/n	Rate = DC to Lesser of 8 MHz or (0.03 * F _{carrier})	± 10 MHz/n	
	Unlocked Wide	Rate= DC to 100 Hz	± 100 MHz/n	Rate = DC to 100 Hz	± 100 MHz/n	
Deviation Accuracy	Locked and Low-noise Unlocked Narrow	Rate = 100 kHz Sine wave Int. or 1 V _{pk} Ext.	10 % (5 % typical) Rate= 100 kHz sine wave Int. or 1 V _{pk} Ext. 1		10 % (5 % typical)	
Flatness	Locked	Rate = 10 kHz to 1 MHz \pm 1 dB relative to 100 kHzRate = 10 kHz to Lesser of 1 MHz or (0.01 * F _{carrier})		± 1 dB relative to 100 kHz		
	Locked		1 kHz to 10 MHz		1 kHz to Lesser of 10 MHz or (0.03 * F _{carrier})	
Bandwidth (3 dB)	Locked Low-noise		30 kHz to 10 MHz		30 kHz to Lesser of 8 MHz or (0.03 * F _{carrier})	
(5 06)	Unlocked Narrow		DC to 10 MHz		DC to Lesser of 10 MHz or (0.03 * F _{carrier})	
	Unlocked Wide		DC to 100 Hz		DC to 100 Hz	
Incidental AM	Locked and Low-noise Unlocked Narrow	1 MHz Rate ± 1 MHz Deviation	< 2 % typical	Rate and Dev.= Lesser of 1 MHz or (0.01 * F _{carrier})	< 2 % typical	
Harmonic Distortion	Locked	10 kHz Rate, ± 1 MHz Deviation	< 1 %	Rate = 10 kHz, Dev.= ± 1 MHz /n	< 1 %	
	Locked		± (10 kHz/V to 20 MHz/V)/n		± (10 kHz/V to 20 MHz/V)/n	
External	Locked Low-noise		± (10 kHz/V to 20 MHz/V)/n	1	± (10 kHz/V to 20 MHz/V)/n	
Sensitivity	Unlocked Narrow	±1V maximum input	± (10 kHz/V to 20 MHz/V)/n	± 1 V _{pk} maximum input	± (10 kHz/V to 20 MHz/V)/n	
Sensitivity	Unlocked Wide	1	± (100 kHz/V to 100 MHz/V)/n	1	± (100 kHz/V to 100 MHz/V)/r	

Phase Modulation

			For all Frequencies other than < 2.2 GHz with Option 4		quencies ⁄ith Option 4	
Parameter Modes		Conditions	Specifications	Conditions	Specifications	
Deviation	Narrow	Rate= DC to 8 MHz	Rate= DC to 8 MHz $\pm [Lesser of 3 rad or R (5 MHz/mod rate)]/n 8$		± [Lesser of 3 rad or (5 MHz/mod rate)]/n	
Wide		Rate = DC to 1 MHz	± [Lesser of 400 rad or (10 MHz/mod rate)]/n	Rate = DC to Lesser of 1 MHz or (0.03 * F _{carrier)}	± [Lesser of 400 rad or (10 MHz/mod rate)]/n	
Accuracy	Narrow and Wide	100 kHz Internal or 1 V _{pk} External, sine	10 %	100 kHz Internal or 1 V _{pk} External, sine	10 %	
Bandwidth	Bandwidth Narrow DC to 10 MHz			DC to Lesser of 10 MHz or (0.03 * F _{carrier})		
(3 dB) Wide			DC to 1 MHz		DC to Lesser of 1 MHz or (0.03 * F _{carrier)}	
Flatness	Narrow	Rate= DC to 1 MHz	± 1 dB relative to 100 kHz	Rate = DC to (Lesser of 1 MHz or (0.01 * F _{carrier})	± 1 dB relative to 100 kHz rate	
FIGUIESS	Wide	Rate = DC to 500 kHz	± 1 dB relative to 100 kHz	Rate = DC to Lesser of 500 kHz or (0.01 * F _{carrier})	± 1 dB relative to 100 kHz rate	
External	ernal Narrow ± 1 V requirement ± (0.0025 ra		± (0.0025 rad/V to 5 rad/V)/n	± 1 V _{nk} maximum input	± (0.0025 rad/V to 5 rad/V)/n	
Sensitivity Wide $\pm 1 \text{ V}$ maximum input $\pm (0.2)$		± (0.25 rad/V to 500 rad/V)/n	± • • _{pk} maximum input	± (0.25 rad/V to 500 rad/V)/n		

Amplitude Modulation (Option 14)

Description	Option 14 adds amplitude modulation, driven externally via a rear panel BNC connector 50 Ω . For internal modulation, add Internal LF and Pulse Generators Option 27. All amplitude modulation specifications apply at 50 % depth, 1 kHz rate, with RF level set 6 dB below maximum specified leveled output power, unless otherwise noted. Amplitude Modulation is not available < 10 MHz with Option 22.
AM Depth	Linear: 0 % to 90 % (nominal)
	Log: 0 dB to 20 dB (nominal)
Accuracy	Reading ± 5 %
AM Bandwidth (3 dB)	DC to 50 kHz minimum
	DC to 100 kHz typical
	Typical below 2.2 GHz, when ordered with Options 4 and 15
Flatness (DC to 10 kHz rates)	± 0.3 dB
Distortion	< 5 % typical
Incidental Phase Modulation (30 % depth, 10	
kHz rate)	< 0.2 rad typical
External AM Input	Log AM or Linear AM input
	Rear-panel BNC (50 Ω input impedance)
	For internal modulation, add LF Generator Option 27.
Sensitivity	Log AM: Continuously variable from 0 dB per volt to 25 dB per volt.
	Linear AM: Continuously variable from 0 % per volt to 100 % per volt.
Maximum Input	± 1 V _{pk}

Specifications

Pulse Modulation (Option 26)						
Description	Option 26 adds pulse modulation, driven externally via a rear panel BNC connector, TTL. For internal modulation, add Internal LF and Pulse Generators Option 27. Pulse modulation specifications apply at maximum rated power, unless otherwise noted. Pulse modulation is not available < 10 MHz with Option 22.					
On/Off Ratio	> 80 dB or					
	> 70 dB with high power > 70 dB with Option 4 or	Option 15; 5 and without Option 2 at 5	00 MHz			
Minimum Leveled Pulse Width	100 ns, ≥ 1 GHz					
	1 μs, < 1 GHz					
Minimum Unleveled Pulse Width	< 10 ns					
Level Accuracy Relative to CW (100 Hz to 1 MHz PRF)						
	\pm 1.0 dB, < 1 μ s pulse wid					
Pulse Delay (typical)	50 ns in External Mode					
PRF Range	DC to 10 MHz, unleveled					
	100 Hz to 5 MHz, leveled					
External Input	Rear-panel BNC					
·	For internal modulation,	add Pulse Generator Optior	27.			
Drive Level	TTL compatible input					
Input Logic		-true, selectable from modu	lation menu			
Frequency Bango	Rise and Fall Time	Oversheet	Pulse Width	Video Foodthrough		
Frequency Range	(10 % to 90 %)	Overshoot	Compression	Video Feedthrough		
≥ 10 MHz to < 31.25 MHz (Opt. 4)	400 ns ^a	33 % ^a	40 ns ^a	± 70 mV ^a		

i equeiley mange	(••••••	•••••••••••••	
≥ 10 MHz to < 31.25 MHz (Opt. 4)	400 ns ^a	33 % ^a	40 ns ^a	± 70 mV ^a
≥ 31.25 MHz to < 125 MHz Opt. 4)	90 ns ^a	22 % ^a	12 ns ^a	± 130 mV ^a
≥ 125 MHz to < 500 MHz (Opt. 4)	33 ns ^a	11 % ^a	12 ns ^a	± 70 mV ^a
≥ 500 MHz to < 2200 MHz (Opt. 4)	15 ns ^a	10 %	12 ns ^a	± 50 mV ^a
≥ 10 MHz to < 1000 MHz (Opt. 5)	15 ns, 10 ns ^a	10 %	8 ns ^a	± 30 mV ^a
\geq 1 GHz to < 2 GHz (Opt. 5)	10 ns, 5 ns ^a	10 %	8 ns ^a	± 30 mV ^a
≥ 2 GHz to 67 GHz ^b	10 ns, 5 ns ^a	10 % ^c	8 ns ^a	± 30 mV ^a

a. Typical values.

b. Rise time and Pulse Width Compression, > 20 GHz, degrades by 2 ns, with High Power Option 15.
c. For 50 GHz and 67 GHz units, overshoot > 40 GHz is 20 % typical at rated power.

Internal LF and Pulse Generators (Option 27)


Description	An internal pulse generator and two internal waveform generators are added, one providing a frequency or phase modulating signal and the other an amplitude modulating signal. This Internal LF and Pulse Generators option can only be ordered in combination with either FM/ Φ M, AM, or Pulse options, 12, 14, and 26 respectively.
Waveforms	Sinusoid, square-wave, triangle, positive ramp, negative ramp, Gaussian noise, uniform noise
	(Check Option 10 for User-defined.)
Rate	0.1 Hz to 10 MHz sinusoidal
	0.1 Hz to 1 MHz square-wave, triangle, ramps
Resolution	0.1 Hz
Accuracy	Same as instrument timebase ± 0.014 Hz
Waveform Outputs	Two BNC connectors on the rear panel, FM/ Φ M OUT and AM OUT
Pulse Modes	Singlet, doublet, triplet, quadruplet
Pulse Triggers	Free-run, triggered, gated, delayed, triggered with delay, swept-delay
Pulse Inputs/Outputs	Video pulse and sync out, rear-panel BNC connectors
	Selectable Clock Rate

Pulse Parameter		Narrow (100 MHz)	Wide (10 MHz)
Pulse Width		10 ns to 160 ms	100 ns to 1.6 s
Pulse Period ^a		100 ns to 160 ms	600 ns to 1.6 s
	Singlet	0 ms to 160 ms	0 s to 1.6 s
Variable Delay	Doublet	100 ns to 160 ms	300 ns to 1.6 s
	Triplet	100 ns to 160 ms	300 ns to 1.6 s
	Quadruplet	100 ns to 160 ms	300 ns to 1.6 s
Resolution		10 ns	100 ns
Accuracy		10 ns (5 ns typical)	10 ns (5 ns typical)

a. Period must be longer than the sum of delay and width by 5 clock cycles minimum.

Ultra-Stable Phase Tracking (Option 36)

Description	Option 36 enables up to three MG3690C units fitted with Option 3 or 3X to phase track with a very high degree of stability. Option 36 provides additional rear panel connectors to link internal reference signals together.
100 MHz Reference Output	Provides the reference signal to drive up to two other MG3690C generators.
	All MG3690C generators must have Option 36 and either Option 3 or 3X.
	This signal is only intended for use with other Option 36 instruments.
100 MHz Reference Input	Accepts the 100 MHz reference signal from another MG3690C fitted with Option 36.
	This input is only intended for use with other Option 36 instruments.
Phase Drift	< ± 1° over 5 seconds (typical)
	< ± 1.5° over 100 seconds (typical), after 24 hours warm-up time

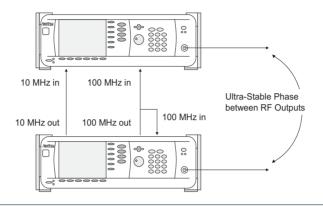

User-Defined Modulation Waveform Software (Option 10)

A software package download that provides the ability to download user-defined waveforms into the internal LF Generator's memory (requires Option 27, 28A, or 28B). The MG3690C provides as standard with the LF Generator sinusoidal, square-wave, triangle, positive ramp, Gaussian noise, and uniform noise waveforms.

Two look-up tables of 65,536 points can be used to generate two pseudo-random waveforms, one for amplitude modulation and the other for frequency or phase modulation. The download files are simple space-delimited text files containing integer numbers between 0 and 4095, where 0 corresponds to the minimum modulation level and 4095 the maximum.

In addition to the capability of downloading custom waveforms, the software offers a virtual instrument modulation panel. Custom modulation setups with user waveforms can be stored for future use. For IFF signal simulation, the internal generators can be synchronized. They can also be disconnected from the internal modulators, making the low frequency waveforms available at the rear panel for external purposes.

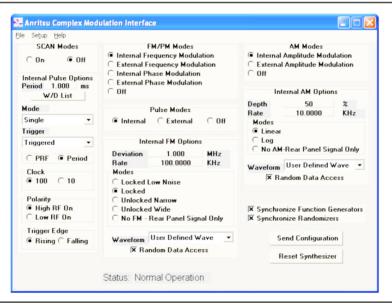


Figure 2-1. Complex Modulation Interface

Millimeter-wave Frequency Coverage

Millimeter-Wave Multiplier 2000-1694 Series

2000-1694 series external waveguide output multipliers are available for banded frequency coverage up to 500 GHz. These external multipliers require at a minimum, an MG3692C with 20 GHz coverage. The output power required to drive the modules is +10 dBm. They can be powered from an external power supply (+12 VDC, 1.5 A typical) using the supplied double banana power cord, or from the 40-187-R DC Power Supply and 2000-1710-R Millimeter-wave power supply adapter. Both included with the modules.

2000-1694 series multipliers have a saturated, unleveled, output power, yet their inherent flatness is exceptional. Modulating the input drive will indeed modulate the output, except for the case of Amplitude Modulation. Since the output is saturated, Amplitude Modulation is not recommended with these millimeter-wave modules. Frequency and Phase Modulation is possible, but the achieved deviation will be multiplied based on the multiplication factor of the module. Pulse modulation is also possible, with even sharper rise and fall times than the input. All modulation performances are not specified.

For ease of operation, the MG3690C allows the user to enter a frequency scaling factor, the module's multiplication factor, which will be used only for purposes of displaying the proper frequency at the output of the millimeter-wave module, on the MG3690C front panel display.



Multiplier P/N ^{a b c}	2000-1694 -15-R	2000-1694 -12-R	2000-1694 -10-R	2000-1694 -08-R	2000-1694 -06-R	2000-1694 -05-R	2000-1694 -03-R	2000-1694 -02-R
Waveguide Input	12.5 GHz to	10.0 GHz to	12.5 GHz to	11.2 GHz to	9.1 GHz to	11.6 GHz -	12.2 GHz to	10.8 GHz to
Frequency	18.8 GHz	15.0 GHz	18.4 GHz	17.5 GHz	14.2 GHz	18.4 GHz	18.1 GHz	16.7 GHz
Waveguide Output	50 GHz to	60 GHz to	75 GHz to	90 GHz to	110 GHz to	140 GHz to	220 GHz to	325 GHz to
Frequency	75 GHz	90 GHz	110 GHz	140 GHz	170 GHz	220 GHz	325 GHz	500 GHz
Waveguide Band	WR-15	WR-12	WR-10	WR-08	WR-06	WR-05	WR-03	WR-02.2
			WM-2540	WM-2032	WM-1651	WM-1295	WM-864	WM-570
Flange ^d	(008)	(009)	(010)	(M08)	(M06)	(M05)	(M03)	(M02.2)
Output Power (typical)	+8 dBm	+6 dBm	+7 dBm	–5 dBm	–9 dBm	–15 dBm	–25 dBm ^e	–27 dBm ^e
Output Flatness (typical) (Unleveled)	± 2 dB	± 2 dB	± 3 dB	_	-	-	-	-
Output Match	> 11.7 dB	6 dB (typical)	6 dB (typical)					
Multiplication Factor (m)	x4	хб	хб	x8	x12	x12	x18	x30
Frequency Accuracy	(Synthesizer Ac	curacy x m)	1	1	1			· · · · · · · · · · · · · · · · · · ·
Frequency Resolution	(Synthesizer Re	solution x m)						
Manual Adjustable Attenuator ^f	25 dB min							N/A
Harmonics and Spurious ^{g,h}	–20 dBc (typica	–20 dBc (typical)						N/A
Input Power Required	+10 dBm	+10 dBm						
RF Input Connector	SMA (female)							
DC Power	12 VDC, 1.5 A (c	double-banana p	ower cord includ	ed) ^b				
Dimensions				nterfaces, or opt	ional manual att	enuation adjuste	r)	
Weight	< 1 kg					-		
Temperature	+20 °C to +30 °C	C						

a. These millimeter-wave modules are produced by OML Inc. (Oleson Microwave Labs), located in Morgan Hill, CA., with mutual collaborative experiences over many years. For detailed and up-to-date specifications, please call OML, Inc. or visit their website at http://www.omlinc.com.
 b. Multipliers require power from an external power supply (+12 VDC, 1.5 A typical) using the supplied double banana power cord, or from the 40-187-R DC Power Supply and 2000-1710-R Millimeter-wave Power Supply Adapter (both included with the modules).

c. Warranty period for the 2000-1694 Series is one year

d. Waveguide output flanges are per MIL-DTL-3922/67D (UG387/U-M).

e. Output power is estimated.

f. Available as an option. To order, add "A" to multiplier module part number (for example, 2000-1694-15A-R). Not available with 2000-1694-02-R.

g. In-band mixing products typically \leq -15 dBc in the lower 10 % of the waveguide band.

h. As relates to multiplied output frequencies.

Inputs and Outputs	Refer to the illustration on page 2-21.
- Description	Connectors may be available but not active if option is not ordered.
EXT ALC IN	Provides for leveling the RF output signal externally with either a detector or power meter.
	Signal requirements are shown in the RF Output specifications.
	BNC type, rear panel
RF OUTPUT (Option 9)	Provides for RF output from 50 Ω source impedance.
	Option 9 moves the RF Output connector from the front to the rear panel.
	K Connector (female) $f_{max} \le 40 \text{ GHz}$
	V Connector (female) $f_{max} \ge 40 \text{ GHz}$
10 MHz REF IN	Accepts an external 10 MHz ± 50 Hz, 0 dBm to +20 dBm time-base signal.
	Automatically disconnects the internal high-stability time-base option, if installed.
	50 Ω impedance
	BNC type, rear panel
10 MHz REF OUT	Provides a 1 V _{p-p} , AC coupled, 10 MHz signal derived from the internal frequency standard.
	50 Ω impedance
	BNC type, rear panel
100 MHz REF IN (Option 36)	Accepts the 100 MHz signal from an MG3690C with Option 36 for ultra-stable phase tracking.
100 MHz REF OUT (Option 36)	Provides the 100 MHz signal for an MG3690C with Option 36 ultra-stable phase tracking.
HORIZ OUT (Horizontal Sweep Output)	Provides 0 V at beginning and +10 V at end of sweep, regardless of sweep width.
	In CW mode, the voltage is proportional to frequency between 0 V at low end and +10 V at the high end of
	the range.
	In CW mode, if CW RAMP is enabled, a repetitive, 0 V to +10 V ramp is provided.
	BNC type, rear panel
EFC IN	Provides the capability to frequency modulate the internal crystal oscillator, allowing phase locking of the synthesizer inside an external lock loop. Specifications are on page 2-4.
	BNC type, rear panel
AUX I/O (Auxiliary Input/Output)	Provides for most of the rear panel BNC connections through a single, 25-pin, D type connector. Supports master-slave operation with another synthesizer or allows for a single-cable interface with the Model 56100A Scalar Network Analyzer and other Anritsu instruments. See Aux I/O Pin Descriptions on page 2-21. Also provides an Ethernet factory default IP address reset function via pin 19.
	25 pin D-type, rear panel
SERIAL I/O	Provides access to RS-232 terminal ports to support service and calibration functions and master-slave operations.
	RJ45 type, rear panel
ETHERNET (10/100 Base-T LAN) I/O	Provides input/output connections for an Ethernet interface.
	RJ45 type, rear panel
IEEE-488 GPIB	Provides input/output connections for the General Purpose Interface Bus (GPIB).
	Type 57, rear panel
PULSE TRIG IN (Option 26)	Accepts an external TTL compatible signal to pulse modulate the RF output signal or to trigger or to gate the optional internal pulse generator.
	BNC type, rear panel
PULSE SYNC OUT (Option 27)	Provides a TTL compatible signal, synchronized to the internal pulse modulation output.
	BNC type, rear panel
PULSE VIDEO OUT (Option 27)	Provides a video modulating signal from the internal pulse generator.
	BNC type, rear panel
AM IN (Option 14)	Accepts an external signal to amplitude modulate the RF output signal.
	50 Ω impedance
	BNC type, rear panel
FM/ΦM IN (Option 12)	Accepts an external signal to frequency or phase modulate the RF output signal.
	50 Ω impedance
	BNC type, rear panel
AM OUT (Option 27)	Provides the amplitude modulation waveform from the internal LF generator. BNC type, rear panel.
FM/ΦM OUT (Option 27)	Provides the frequency or phase modulation waveform from the internal LF generator. BNC type, rear panel

Specifications

Rear Panel



MG3690C Rear Panel

Aux I/O Pin Descriptions

	Pin	Description	Pin	Description
\bigcirc	1	Horizontal Output	14	V/GHz Output
	2	Chassis Ground	15	End-of-Sweep Input
	3	Sequential Sync Output	16	End-of-Sweep Output
	4	Low Alternate Enable Output	17	N/C
23 10 10	5	Marker Output	18	Sweep Dwell Input
	6	Retrace Blanking Output	19	Ethernet Default Address Reset
	7	Low Alternate Sweep Output	20	Bandswitch Blanking Output
19	8	Chassis Ground	21	Master Reset
	9	N/C	22	Horizontal Sweep Input
	10	Sweep Dwell Output	23	Horizontal Sweep Input Return
	11	Lock Status Output	24	Chassis Ground
	12	Penlift	25	Memory Sequencing Input
0	13	External Trigger Input		

Models	
MG3692C	2 GHz to 20 GHz Signal Generator
MG3694C	2 GHz to 40 GHz Signal Generator
MG3695C	2 GHz to 50 GHz Signal Generator
MG3697C	2 GHz to 67 GHz Signal Generator (operational to 70 GHz)
Standard Accessories (included)	
11410-00976	Product documentation and software brochure.
2000-1732-R	CAT-7 shielded, twisted-pair, Ethernet cable, 10 ft.
Miscellaneous	Power Cord with plug-type and rating determined by destination country.
	3 Year Factory Warranty Options and Accessories. 2 Year Factory Warranty for 2000-1694 Series.
Options MG3690C/1A	Rack Mount with slides. Rack mount kit containing a set of track slides, mounting ears, and front panel handles to let the instrument be mounted in a standard 19-inch equipment rack.
MG3690C/1B	Rack Mount without slides. Modifies rack mounting hardware to install unit in a console that has mounting shelves. Includes mounting ears and front panel handles.
MG3690C/2A, MG3690C/2B, MG3690C/2C	Mechanical Step Attenuator. Adds a 10 dB/step attenuator. Rated RF output power is reduced. This option comes in different versions, based on instrument configuration.
MG3690C/3	Ultra Low Phase Noise. Adds new modules to significantly reduce SSB phase noise. Not available with Option 3X.
MG3690C/3X	Premium Phase Noise. Improves Option 3 < 1 kHz offset. Not available with Option 3.
MG3690C/4	8 MHz to 2.2 GHz RF coverage, Ultra-Low Phase Noise version. Uses a digital down converter to significantl reduce SSB phase noise. All specifications apply \geq 10 MHz.
MG3690C/5	8 MHz to 2 GHz RF Coverage. Uses an analog down converter. All specifications apply \ge 10 MHz.
MG3690C/6	Analog Sweep Capability. When used with Option 4, analog sweep capability is limited to \ge 500 MHz
MG3690C/9V, MG3690C/9K	Rear Panel Output Moves the RF output connector to the rear panel.
	This option comes in different versions, based on instrument configuration
MG3690C/10	User-Defined Modulation Waveform Software. External software package provides the ability to download user-defined waveforms into the memory of the internal waveform generator, serially or via GPIB or Ethernet. External PC and an instrument with LF Generator, Option 27, are required.
MG3690C/12	Frequency and Phase Modulation. External, via a rear panel BNC connector. For internal modulation capability, requires addition of an LF Generator, Option 27.
MG3690C/14	Amplitude Modulation. External, via a rear panel BNC connector. For internal modulation capability, requires addition of an LF Generator, Option 27.
MG3690C/15A, MG3690C/15B, MG3690C/15C, MG3690C/15D	High Power. Adds high-power RF components to the instrument to increase its output power level. This option comes in different versions, based on instrument configuration.
MG3690C/16	High Stability Time Base. Adds an ovenized, 10 MHz crystal oscillator as a high-stability time base.
MG3690C/17	Delete Front Panel. Deletes the front panel for use in remote control applications where a front panel display and keyboard control are not needed. Only available with Options 1A or 1B.
MG3690C/22	0.1 Hz to 10 MHz Audio coverage. Uses a DDS for coverage down to approximately DC. When adding Option 22, the output power is derated by 2 dB. Frequency resolution below 10 MHz is 0.02 Hz. No modulation is available in the 0.1 Hz to 10 MHz band. Not available without Option 4 or 5.
MG3690C/26A, MG3690C/26B	Pulse Modulation. External, via a rear panel BNC connector. For internal modulation capability, requires addition of a Pulse Generator, Option 27.
MG3690C/27	This option comes in different versions, based on instrument configuration. Internal LF and Pulse Generators. Provides modulation waveforms for internal AM (if Option 14 installed), FM (if Option 12 installed), ΦM (if Option 12 installed) and Pulse (if Option 26A/B installed).
MG3690C/28A, MG3690C/28B	Not available without Option 12, 14, or 26. Analog Modulation Suite. For ease of ordering and package pricing, this option bundles Options 12, 14, 26 and 27, offering internally- and externally-driven AM, FM, ΦM, and Pulse Modulation.
MG3690C/36	This option comes in different versions, based on instrument configuration. Ultra-Stable Phase Tracking. Provides the capability for ultra-stable phase tracking between instruments
111230306130	using the internal 100 MHz reference. Requires Option 3 or 3X.
MG3690C/CE	CE Compliance with CE mark.
MG3692C/97, MG3694C/97, MG3695C/97, MG3697/97	Accredited Calibration to ISO17025 and ANSI/NCSL Z540-1. Includes calibration certificate, test report, and uncertainty data.
MG3690C/98	Standard Calibration to ISO17025 and ANSI/NCSL Z540-1. Includes calibration certificate.
MG3690C/99	Premium Calibration to ISO17025 and ANSI/NCSL Z540-1. Includes calibration certificate, test report, and uncertainty data.

Specifications MG3690C Accessories 34RKNF50 DC to 20 GHz, Ruggedized Type N female adapter for units with a K connector output ND36329 MASTER/SLAVE interface cable set 760-278 Transit case (16 kg, 79.4 cm x 61.5 cm x 44.4 cm, roll-away on four wheels) 806-97 Aux I/O Cable, 25 pin to BNC: Provides BNC access to Aux I/O Data Lines: Sequential Sync, Marker Out, Bandswitch Blanking, Retrace Blanking, Sweep Dwell In, V/GHz, Horizontal Out.

Millimeter Wave Accessories

Note: To order a multiplier with an optional manually adjustable attenuator, add an "A" to the multiplier module part number (for example, 2000-1694-15A-R). Not available with 200-1694-02-R

	2000-1694-15-R	50 GHz to 75 GHz V band Multiplier Source Module, WR-15
	2000-1694-12-R	60 GHz to 90 GHz E band Multiplier Source Module, WR-12
	2000-1694-10-R	75 GHz to 110 GHz W band Multiplier Source Module, WR-10
	2000-1694-08-R	90 GHz to 140 GHz F band Multiplier Source Module, WR-08
	2000-1694-06-R	110 GHz to 170 GHz D band Multiplier Source Module, WR-06
	2000-1694-05-R	140 GHz to 220 GHz G band Multiplier Source Module, WR-05
	2000-1694-03-R	220 GHz to 325 GHz H band Multiplier Source Module, WR-03
	2000-1694-02-R	325 GHz to 500 GHz Multiplier Source Module, WR-02.2
	40-187-R	DC Power Supply. Included with Multiplier Source Module.
	2000-1710-R	Millimeter wave Power Supply Adapter. Included with Multiplier Source Module.
Manuals	10370-10373	Operation Manual
	10370-10374	Programming Manual (Native)
	10370-10375	Programming Manual (SCPI)

Upgrades

Economical upgrades are available to upgrade any model to any higher performing model. Consult Anritsu for details.

Maintenance Manual

MG3690C Option Configuration Guide

10370-10376

		Options															
	0	РТ 1	ОРТ 2				OPT 3	OPT 3X		OPT 4	OPT 5	ОРТ 6	OPT 9		OPT 10	OPT 12	OP 14
Models	1A	1B	2A	2B	2C								9K	9V			
MG3692C	•	•	•				•a	•a		•p	•p	•			•c	•	•
MG3694C	•	•		•			•a	•a		•p	•p	•			• ^c	•	•
MG3695C	•	•			•		•a	•a		•p	•p	•		•	•c	•	•
MG3697C	•	•			•		•a	•a		•p	•p	•		•	• ^c	•	•

		Options (continued)														
	OPT 15				OPT 16	OPT 17	OPT 22	OPT 26		OPT 27	OPT 28		OPT 36	OPT 98	OPT 99	
Models	15A	15B	15C	15D				26A	26B		28A	28B				
MG3692C	•				•	•d	•e	•		•f	•a		• ^h	•	•	
MG3694C		•			•	•d	•e		•	•f		•g	•h	•	•	
MG3695C			•		•	•d	•e		•	•t		•g	•h	•	•	
MG3697C				•	•	•q	•e		•	•f		•a	•h	•	•	

a. Options 3 and 3X cannot be ordered together.

b. Options 4 and 5 cannot be ordered together.

c. Option 10 can only be ordered with either Options 27 or 28.

d. Option 17 can only be ordered with either Option 1A or 1B.

e. Option 22 can only be ordered with either Option 4 or 5.

f. Option 27 can only be ordered with either Options 12, 14 or 26 in any combination.

g. Option 28 cannot be ordered along with either Options 12, 14, 26, or 27.

h. Option 36 can only be ordered with either Option 3 or 3X.

Training at Anritsu

Anritsu has designed courses to help you stay up to date with technologies important to your job. For available training courses, visit: www.anritsu.com/training

INCITED envision : ensure

United States

Anritsu Americas Sales Company 450 Century Parkway, Suite 190 Allen, TX 75013, U.S.A. Phone: +1-800-Anritsu (1-800-267-4878)

• Canada

Anritsu Flectronics I td. 700 Silver Seven Road, Suite 120 Kanata, Ontario K2V 1C3, Canada Phone: +1-613-591-2003 Fax: +1-613-591-1006

• Brazil

Anritsu Eletronica Ltda. Praça Amadeu Amaral, 27 - 1 Andar 01327-010 - Bela Vista - Sao Paulo - SP Brazil Phone: +55-11-3283-2511 Fax: +55-11-3288-6940

Mexico

Anritsu Company, S.A. de C.V. Blvd Miguel de Cervantes Saavedra #169 Piso 1, Col. Granada Mexico, Ciudad de Mexico, 11520, MEXICO

Phone: +52-55-4169-7104 • United Kingdom

Anritsu EMEA L td.

200 Capability Green Luton, Bedfordshire, LU1 3LU, U.K. Phone: +44-1582-433200 Fax: +44-1582-731303

• France

Anritsu S.A. 12 avenue du Québec, Bâtiment Iris 1- Silic 612, 91140 Villebon-sur-Yvette, France Phone: +33-1-60-92-15-50 Fax: +33-1-64-46-10-65

Germany

Anritsu GmbH Nemetschek Haus, Konrad-Zuse-Platz 1 81829 München, Germany Phone: +49-89-442308-0 Fax: +49-89-442308-55

• Italy

Anritsu S.r.l. Via Elio Vittorini 129, 00144 Roma, Italy Phone: +39-6-509-9711 Fax: +39-6-502-2425 List Revision Date: 20200602

Sweden

Anritsu AB Isafjordsgatan 32C 164 40 Kista, Sweden Phone: +46-8-534-707-00

• Finland Anritsu AB

Teknobulevardi 3-5 FI-01530 Vantaa, Finland Phone: +358-20-741-8100 Fax: +358-20-741-8111 Denmark

Anritsu A/S c/o Regus Winghouse, Ørestads Boulevard 73, 4th floor, 2300 Copenhagen S, Denmark Phone: +45-7211-2200

• Russia Anritsu EMEA Ltd.

Representation Office in Russia Tverskaya str. 16/2, bld. 1, 7th floor Moscow 125009, Russia Phone: +7-495-363-1694 Fax: +7-495-935-8962

Spain

Anritsu EMEA Ltd. Representation Office in Spain Paseo de la Castellana, 141 Planta 5, Edificio Cuzco IV 28046, Madrid, Spain Phone: +34-91-572-6761 United Arab Emirates

Anritsu EMEA Ltd.

Dubai Liaison Office 902 Aurora Tower P O Box: 500311- Dubai Internet City Dubai, United Arab Emirates Phone: +971-4-3758479 Fax: +971-4-4249036 • India

Anritsu India Private Limited

6th Floor, Indiqube ETA, No.38/4 Adjacent to EMC2, Doddanekundi, Outer Ring Road Bengaluru 560048, India Phone: +91-80-6728-1300 Fax: +91-80-6728-1301

Singapore

Anritsu Pte. Ltd. 11 Chang Charn Road, #04-01, Shriro House Singapore 159640 Phone: +65-6282-2400 Fax: +65-6282-2533

• P.R. China (Shanghai) Anritsu (China) Co., Ltd.

Room 2701-2705, Tower A New Caohejing International Business Center No. 391 Gui Ping Road Shanghai 200233, P.R. China Phone: +86-21-6237-0898 Fax: +86-21-6237-0899

• P.R. China (Hong Kong)

Anritsu Company Ltd. Unit 1006-7, 10/F. Greenfield Tower, Concordia Plaza No. 1 Science Museum Road Tsim Sha Tsui East, Kowloon Hong Kong, P.R. China Phone: +852-2301-4980 Fax: +852-2301-3545

Japan

Anritsu Corporation 8-5, Tamura-cho, Atsugi-shi, Kanagawa, 243-0016 Japan Phone: +81-46-296-6509 Fax: +81-46-225-8352

• South Korea

Anritsu Corporation, Ltd. 5FL, 235 Pangyoyeok-ro Bundang-gu, Seongnam-si Gyeonggi-do 13494, South Korea Phone: +82-31-696-7750 Fax: +82-31-696-7751

• Australia

Anritsu Pty. Ltd. Unit 20, 21-35 Ricketts Road Mount Waverley, Victoria 3149, Australia Phone: +61-3-9558-8177 Fax: +61-3-9558-8255

Taiwan

Anritsu Company Inc. 7F, No. 316, Sec. 1, NeiHu Rd. Taipei 114, Taiwan Phone: +886-2-8751-1816 Fax: +886-2-8751-1817

MG3690C TDS, PN: 11410-00515, Rev. V Copyright October 2020, Anritsu Company, USA. All Rights Reserved. ® Anritsu All trademarks are registered trademarks of their respective companies. Anritsu utilizes recycled paper and environmentally conscious inks and toner.